





Open the magazine cover, fill it with the 6mm BBs about 350BBs

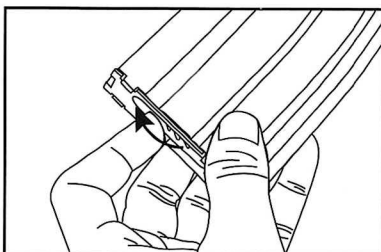

As the figure show, move the gear under the magazine until it is fully and the bullets will be sent up automatically .


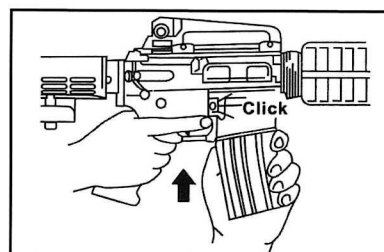


Make sure to set the magazine upwards and connect it firmly until a click sounds be heard.

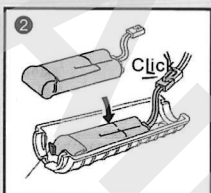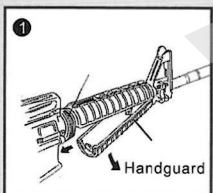


1 Remove the lower half of handguard by pulling back the handguard ring, then pull down the lower part.

2 Put the battery in the handguard as shown on the pictures, plug the connect.

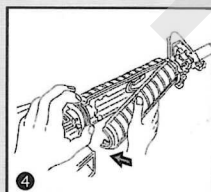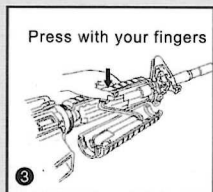


3 Push the plug and wires back in the handguard as shown on the pictures.


4 Put the handguard in its frong right, then put the handguard rear right and close it, it will be locked when the Handguard right is released.

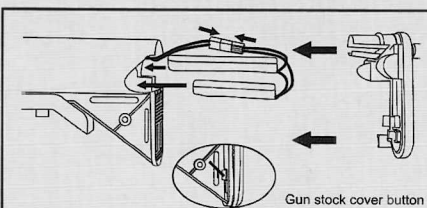

Remove the rubber stock cover, press the two flats simultaneously to remove the stock. Install the battery in the stock and plug the connector. To put back the cover, reverse the initial operations.

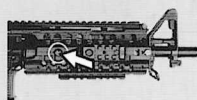

Turn the release screw marked on the illustration

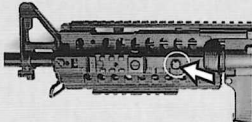


Remember to turn the release screw on both sides. When both release screws are out, flip down the lower part of the S.I.R front rail



connect the battery Reverse the process to close and lock the lower part of the S.I.R front rail into place

● 8.4V Ni-MH Battery Pack

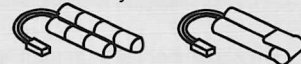

Different product configuration batteries owing to the different products, the concrete will be subject to actual configuration.


● charger for Nickel metal hydride battery

Use the specified battery charger which is applicable to the above battery.






If the point deviation to right then adjust the rear gunsight to right

Turning the windage adjustment dial will move the bullet hitting point to the left or right.

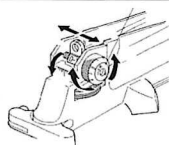

● Pull back the cocking lever to open the bullets tossed cover and the internal HOP-UP system will be seen

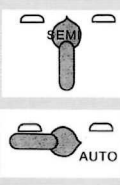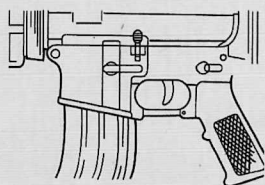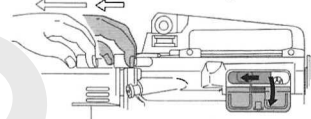

Semi automatic
The gun will fire one shot each time the trigger is pulled.

Fully automatic (automatic firing)


Press trigger, it will start to fire continuously



Safety setting

The trigger cannot be pulled. When you are not firing the gun or during storage. Always set the selector to the safe position.


WARNING - ATTENTION ATENCION

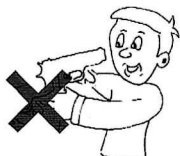

-Store the gun unloded, and do not look down the barrel.
-Treat the gun as if it were loaded.




- Keep out of reach of children.
- Store the replica with magazine removed, and the safety in locked position.

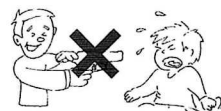


-Never aim at a person
-Do not point at anything you do not wish to shoot
-Those shooting and those in range should use eye protection.



Do not disassemble gun yourself. Always contact your local retailer

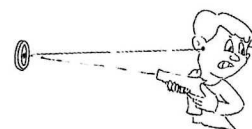


- Do not shoot at fragile objects
- Be careful to avoid rebounding
- Keep your finger off the trigger until ready to shoot.

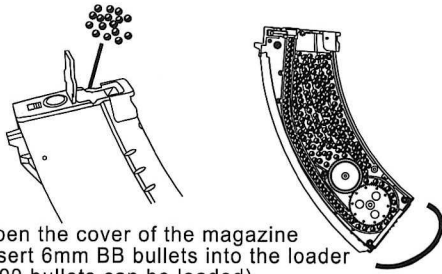


1. Open the cover of the magazine
2. Insert 6mm BB bullets into the loader (500 bullets can be loaded)
3. Replace the magazine cover


Move the gear with hand clockwise until it is fully wound, and the bullets will be sent up automatically. (It can send about 150 rounds automatically.)

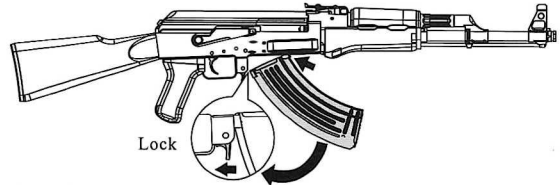

Set the magazine upward. Install the magazine as illustration.

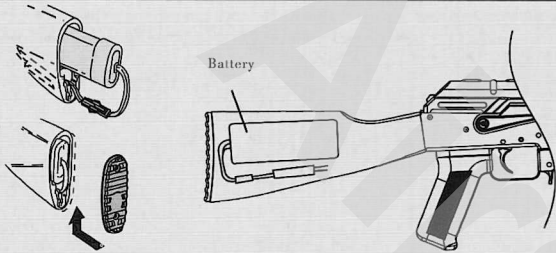

- 1, Remove stock cover by pressing it down, and pull out the connector.
2. Insert charged battery and plug connector.
- 3, Battery, wires and connectors must be inserted in stock, and make the wire in S-types.
- 4, Slide cover back the stock cover.

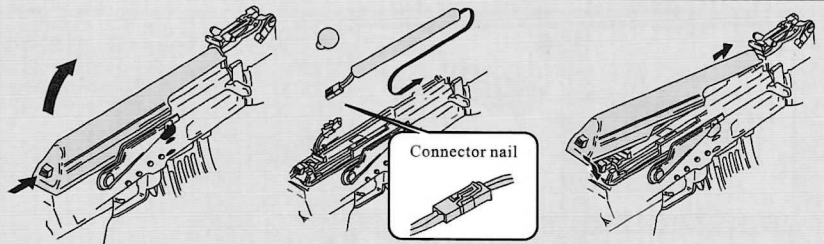

- 1, Push the released button as shown in the picture to open the receiver top.
- 2, Plug the charged battery to the connector and slide it into compartment. Make sure to place the wires under the connector.
- 3, Reverse the initial operations to lock the receiver top.


Please use the special battery: 8.4V
Do not use nonstandard battery or the other brand battery, or it will fall short of design demand.



CAUTION The SD and Mini Battery can not be used

Different product configuration batteries owing to the different products, the concrete will be subject to actual configuration.


- The AK74 series rear sight is a tangent type which is adjusted vertically according to distance to the target.
- Press the adjust button and slide it forward or backward to move the sight up or down. The larger the number, the longer the distance to the target.

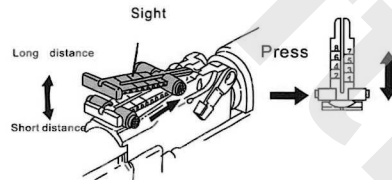

SELECTOR LEVER AND SAFETY SETTING




- Safety setting (the trigger cannot be pulled.)
When you are not firing the gun or during storage always set the selector to the safe position.
- Fully automatic (automatic firing)
The gun will fire automatically while the trigger remains pulled.
- Semi automatic
The gun will fire one shot each time the trigger is pulled.

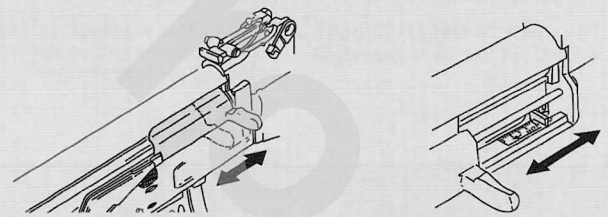

The bullets-tossed cap will move forward and backward while shooting please take care of your hand.

Variable hop-up adjustable lever

WARNING - ATTENTION ATENCION

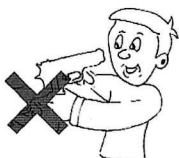

- Store the gun unloaded, and do not look down the barrel.
- Treat the gun as if it were loaded.




- Keep out of reach of children.
- Store the replica with magazine removed, and the safety in locked position.



- Never aim at a person
- Do not point at anything you do not wish to shoot
- Those shooting and those in range should use eye protection.

Do not disassemble gun yourself. Always contact your local retailer

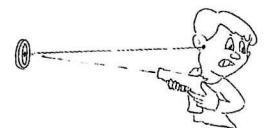

- Do not shoot at fragile objects
- Be careful to avoid rebounding
- Keep your finger off the trigger until ready to shoot.