 




## 警告 • 注意

### WARNING • ATTENTION

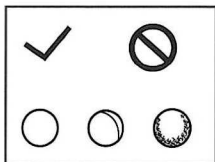

Always use precision BB Bullets for this air gun. Never use any used BB bullets.

请使用精密BB子弹。不要使用任何使用过的BB子弹。



Don't disassemble beyond what is necessary. Or the gun may be damaged.

不要随意拆解，枪可能被损坏。



 
Do not brandish in public, do not alter the coloration and warnings- such an action is dangerous and may be a crime.

不可把人或动物当目标瞄准或射击。请把选择杆拨在SAFE档。除非准备射击一个明确的目标。




Never hold the gun sideways as the BB bullets will curve right or left. This is due to the HOP-UP system.

切勿把枪支侧置射击。因为上翻弹(HOP UP)功能会导致弹道偏向左侧或右侧。

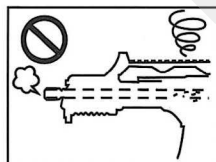


When bullets are clogged, immediately stop operation, remove clogged bullets and then restart operation of the air gun.

 当塞弹时，立刻停止操作，清除阻塞子弹，然后重新操作气枪。

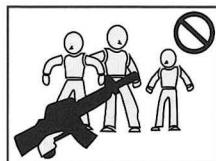

Do not brandish in public, do not alter the coloration and warnings- such an action is dangerous and may be a crime.

 切勿在公众场合展示本汽枪，否则会引起公众的不安。

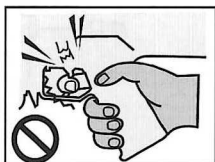

Pulling the trigger with the Safety lever being set to SAFE may damage the gun.

当选择杆拨在SAFE档位时，切勿用力扳动扳机。



Do not look directly into the gun barrel to avoid accidental discharge of BB.

不要直接地看枪管，避免BB弹意外发射。



Select a safe place for operating the air gun, avoiding places where people and cars pass cross or third persons are around.

选择一个安全的地方操作气枪，避免在有的人和汽车的路上操作气枪。

## SPECIFICATIONS

Machanism/Action	Spring Air Repeater
Caliber/Ammunition	6mm plastic BBs
Magazine	Up to 15 plastic BBs
Weight	12.5 oz. (.35kg)
Overall Length	8.5in. (21.59cm)

Sights	Front Blade/Rear Notch
Barrel Length	3.5 in. (8.89cm)
Barrel Material	Smooth bore, aluminum
Safety	Lever
Velocity	Up to 275 fps (83m/s)

**PERFORMANCE:** Many factors can affect velocity, including brand of projectile, type of projectile and barrel condition.

## ACCUTE SHOTING

# M22 & M24

USE 6mm PLASTIC BBs



AGE: Above 18

**INSTRUCTION**

Before using the gun, please read this instruction thoroughly, and retain it for future reference.

We will not be responsible for any trouble caused by misuse or remodelling of the gun.



M24



M22



## WARNING: 警告

	<b> DANGEROUS. NOT A TOY. </b> Adult supervision required. Misuse or careless use may cause serious injury.
	<b> FOR AGES 18 YEARS AND UP- </b> Must be 18 years of age to purchase; minors require parent or legal guardian supervision to operate. 18岁以上年龄者才能购买使用本产品。
	<b> EYE PROTECTION REQUIRED- </b> Always wear eye and body protection to prevent injury. Do not fire at hard surface to prevent ricochet. 务必穿戴上防护眼镜及防护服以避免伤害。切勿射向硬物以免反弹。
	<b> READ INSTRUCTION BEFORE OPERATING- </b> Follow safe handling procedures at all times. The purchaser and user should conform to all laws governing the use and ownership of airguns. 使用前务必详读说明书，尤其是遵照有关安全方面的内容。
	<b> DO NOT BRANDISH OR DISPLAY THIS PRODUCT IN PUBLIC- </b> It may confuse people and may be a crime. Police and others may think it is a firearm. Do not change the coloration and markings to make it look more like a firearm. That is dangerous and may be a crime. 切勿在公众场合展示本产品，它会引起公众的不安。

## 1. Learning the Parts of Your New Air Soft Gun.

Learning the names of the parts of your new soft air gun will help you to understand your owner's manual. Use this manual increase your enjoyment of this air soft gun.

### 1.1 Parts Name

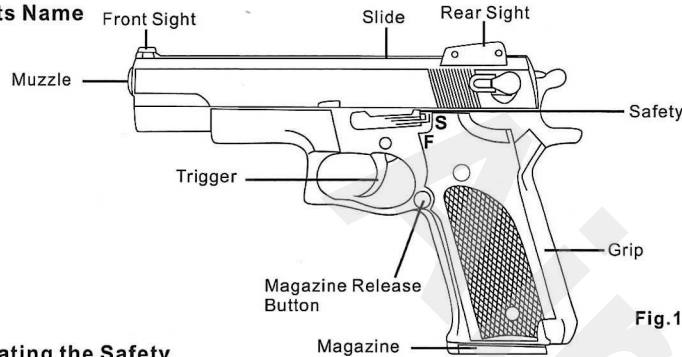 


Fig.1

## 2. Operating the Safety

**WARNING:** Keep the air soft gun in the "ON SAFE" position until you are actually ready to shoot. Then push the safety to the "OFF SAFE" position.

### 2.1 To Put the Air Soft Gun "ON SAFE" :

- Locate the safety on the left hand side of the receiver, above the trigger.(Fig.2)
- Push up the safety, toward the "S" on the receiver, until it stops.
- Even when the safety is "ON Safe", you should continue to handle the air soft gun safely. Do not ever point the air soft gun at anything you do not intend to shoot.

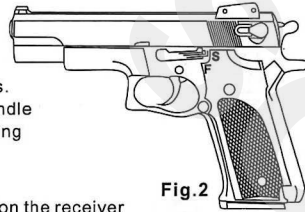 


Fig.2

### 2.2 To take the Air Soft Gun "OFF SAFE" :

- Locate the safety on the left side and push down towards the "F" on the receiver until it stops. The air soft gun is ready to fire when "OFF SAFE" (Fig.2).

## 3. Loading Plastic BBs

**WARNING:** use .24 caliber(6mm) plastic BBs only in the air soft gun. Use of any other ammunition can cause injury to you or damage to the air soft gun.

- While supporting the bottom of the grip with your hand to catch the magazine, press the magazine release button and remove the magazine from the bottom of the grip frame.
- Load no more than 15 plastic BBs into the magazine loading port(Fig.3).
- Insert the loaded magazine back into the bottom of the grip frame until you hear a click. Indicating the magazine is securely locked into place.

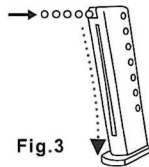 


Fig.3

## 4. Aiming and Firing Safely

- You and others with you should always wear shooting glasses to protect your eyes.
- Always point your air soft gun in a SAFE DIRECTION.
- While holding the air pistol in a horizontal position, cock the air soft pistol by firmly holding the slide with your entire hand, pulling the slide rearward and releasing it in a smooth motion. (Fig.4)
- When you are sure of your target and backstop, and the area around the target is clear. Take the air soft gun "OFF SAFE". (See step2.2)
- Aim the gun and pull the trigger to fire.

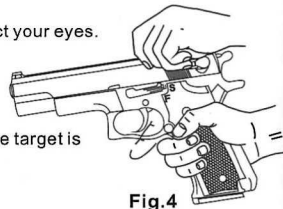 


Fig.4

## 5. Maintaining Your Air Soft Gun

- DO NOT MODIFY OR ALTER YOUR AIR SOFT GUN. Attempts to modify the air soft gun in any way inconsistent with this manual may make it unsafe to use or cause serious injury, and will void the warranty.
- If you drop you air soft gun, check to see that it works properly before you use it again. If anything seems changed, like a shorter or weaker trigger pull, this may mean worn out or broken parts.

## 1. 各部位名称

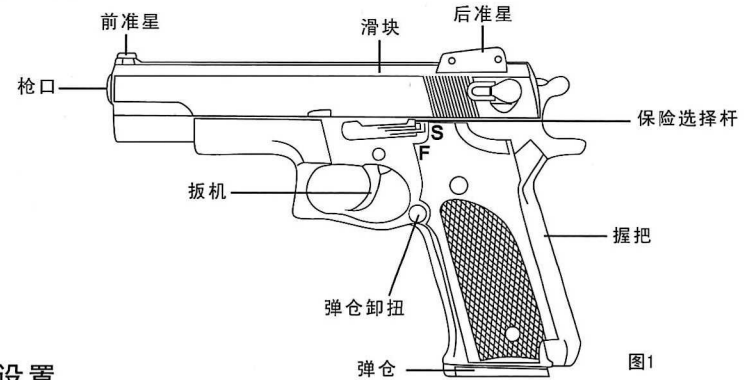 


图1

## 2. 安全设置

**警告:** 请把保险选择杆保持在“S”档位, 除非已准备射击时才把其拨到“F”档位。

### 2.1 把保险选择杆设在“安全”档位

- 保险选择杆位于枪体左侧, 扳机上面。(图2)
- 把保险选择杆拨至“S”位置。
- 当设在“安全”档位时, 您仍需安全地操作本产品。



图2

### 2.2 把保险选择杆设在“发射”档位

- 把保险选择杆拨至“F”位置, 即已准备射击。

## 3. 装入塑料BB弹

**警告:** 使用6mm的塑料BB弹, 使用其他子弹可能会引起人身伤害或损坏本产品。

- 一只手放在握把底部准备接弹盒, 另一只手按下弹仓卸钮, 卸下弹盒。注意避免弹盒跌落摔坏或伤及人身。
- 装上约15粒BB弹。(图3)
- 把弹盒从握把底部插入, 直至听到“咔嚓”一声。

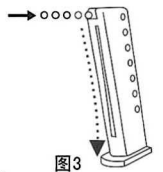 


图3

## 4. 发射

- 向后拉滑块上膛, 直至听到“咔嚓”一声, 再平缓释放滑块(图4)
- 把保险选择杆拨至“F”档位。(见2.2)
- 对准目标, 扣动扳机发射。

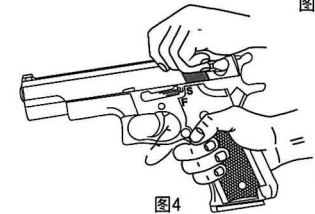 


图4

## 5. 维护

- 不要随便改装此汽枪
- 任何与本使用手册不符的改装此汽枪的行为都可能导致使用不安全或引起严重的受伤。
- 如果汽枪不慎跌落, 请在使用之前检查它是否能正常运作, 若发现枪有任何改变, 例如扳机变短或扳机无力, 则说明枪受磨损或零件损坏。