

M917



Use 6mm BB pellets
1/1 New Generation Airsoft Electric Gun
The All New FALCON Electronic Gearbox

WARNINGS:


- DANGEROUS: NOT A TOY.** Adult supervision required. Misuse or careless use may cause serious injury.
- FOR AGES 18 YEARS AND ABOVE.** Must be 18 years of age to purchase; minors require parent or legal guardian supervision to operate.
- EYE PROTECTION REQUIRED.** Always wear eye and body protection to prevent injury. Do not fire at hard surfaces to prevent ricochet.
- READ INSTRUCTION BEFORE OPERATING.** Follow safe handling procedures at all times. The purchaser and user should conform to all laws governing the use and ownership of airguns.
- DO NOT BRANDISH OR DISPLAY THIS PRODUCT IN PUBLIC.** It may confuse people and may be a crime. Police and others may think it is a firearm. Do not change the coloration and markings to make it look more like a firearm. That is dangerous and may be a crime.

Age: Above 18
Made In China


WARNING

Always read through this manual before operation


- Read through this manual before shooting, paying special attention for safe operation.
- Thoroughly understand the warnings and cautions for safe operation.

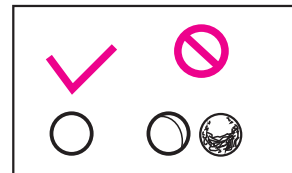


Always use precision BB Bullets for this air gun. Never use any used BB bullets.

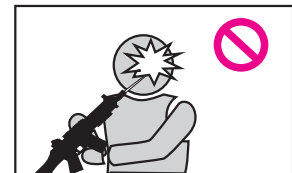


Do not look directly into the gun barrel to avoid accidental discharge of BB.

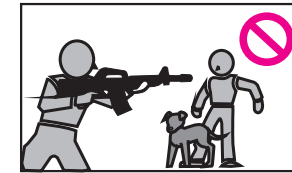


Never aim or shoot a person or animal as the target. Always set the selector on safety position except when you are ready to shoot a target.

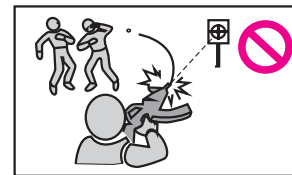


Never hold the gun sideways as the BB bullets will curve right or left. This is due to the HOP-UP system.

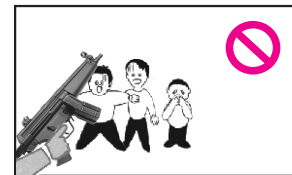


Do not brandish in public, do not alter the coloration and warnings-such an action is dangerous and may be a crime.

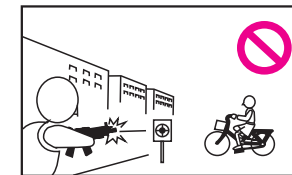


Select a safe place for operating the air gun, avoiding places where people and cars pass cross or third persons are around.

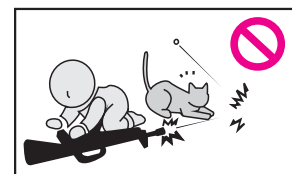

Always remove the battery and store the air gun in a case or bag and at a place out of reach by children so that they will not be injured during mischevous play.

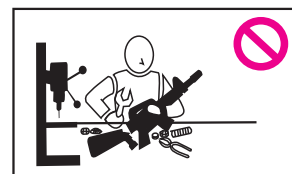


Disassembling or modifying the gun may generate danger or adversely affect the performance. So avoid disassembling or modifying the air gun.

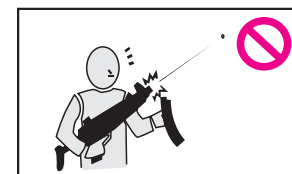

There are cases that bullets remain in the gun after the magazine is disconnected, pulling the trigger carelessly is extremely dangerous. After towards a safe direction and fire to confirm that no bullets remain in the gun.

1 Charging the Battery (Battery and charger are included)

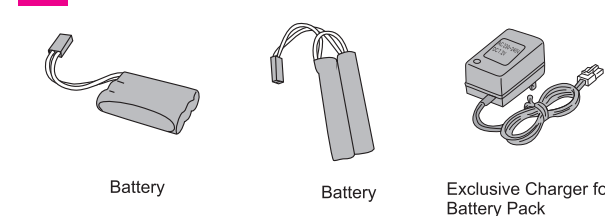


CAUTION

Use the correct battery and charger according to respective instruction manuals. We will not be held responsible for any accident or damage caused by wrongful operation or usage of non-specified battery.

1

2 Components

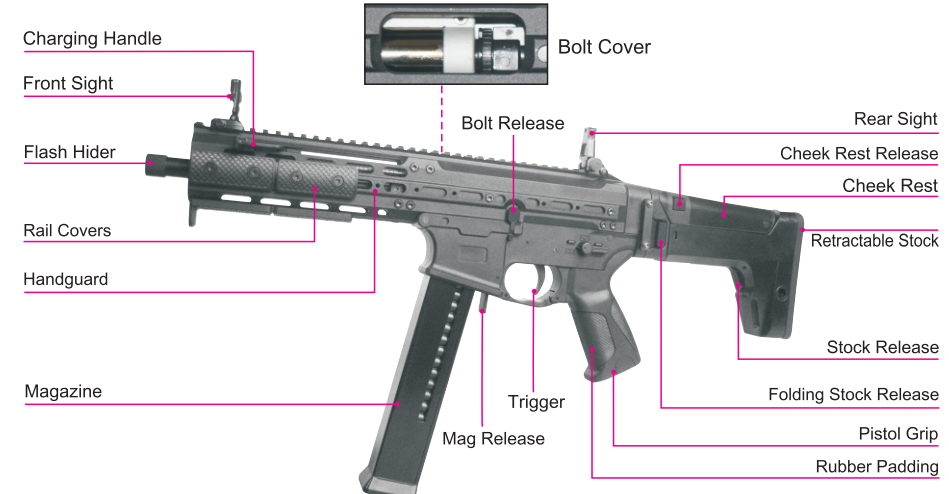

3 Selector lever and Safety Setting



Warning

To prevent malfunction of the switch do not change the selector lever from semi to full auto while pulling the trigger.



1. Safety Setting

Always set the lever to the Safety position and attach the protective cap when you are not firing the gun or during storage.



2. Semi auto (Single Shot)

The gun will fire one shot each time the trigger is pulled.




3. Full Auto (Automatic Firing)


The gun will fire automatically while the trigger remains pulled.

2

4 Rail Cover Installation

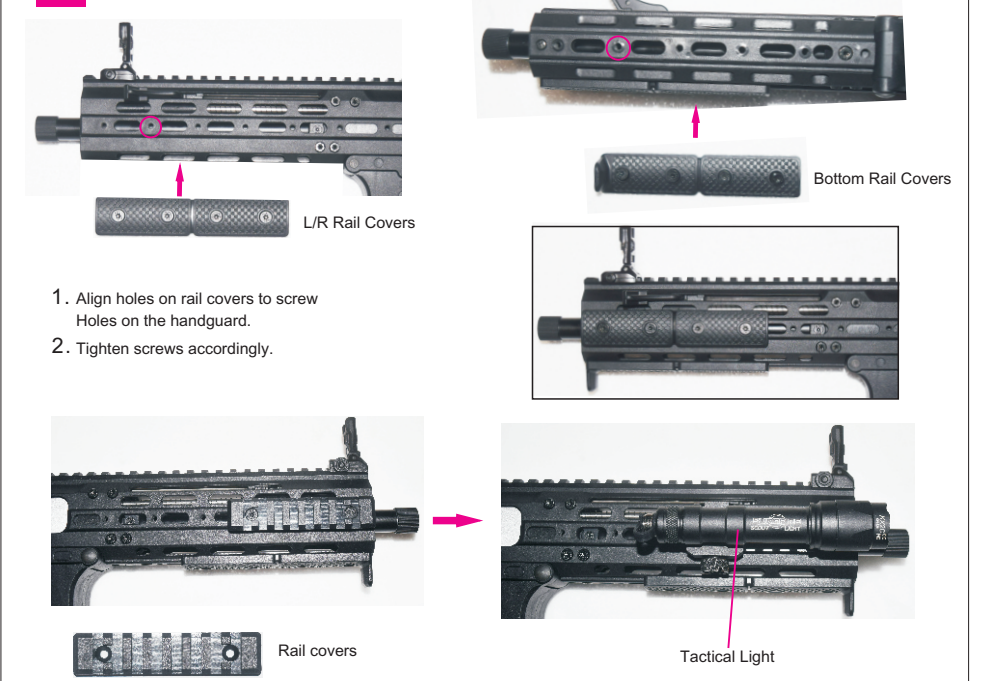


5 Charging Handle Installation

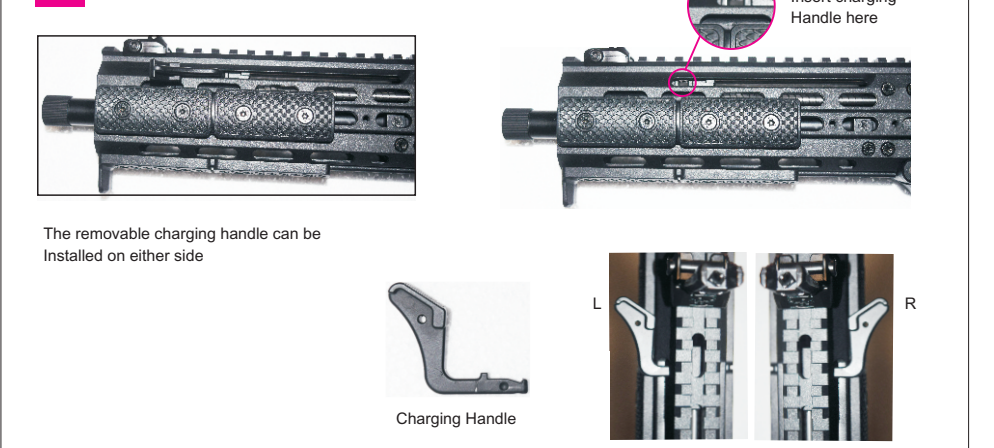


3

6 Mag Release Installation

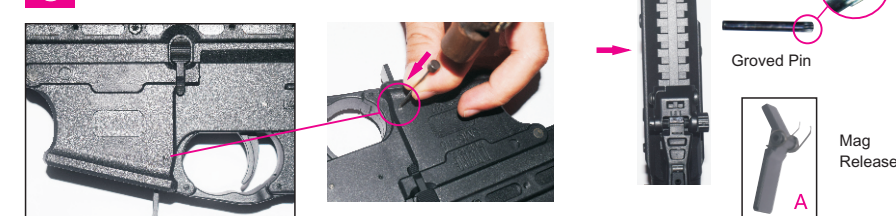


1. Punch out grooved pin to remove mag release (pay attention to which side the grooves are on. Punch from smooth end)

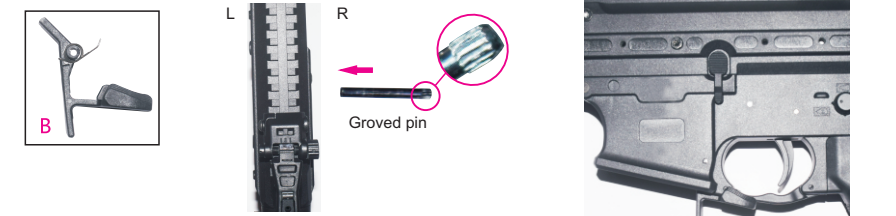

2. Install type b mag release by reinstalling the grooved pin. (insert the smooth end of Grooved pin into the right side of the gun)


7 Setting The Battery

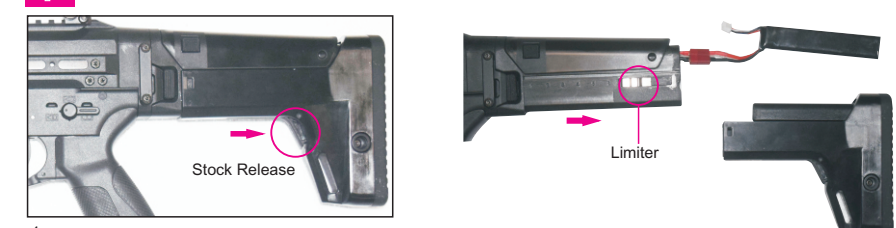

1. Press stock release and fully extend stock until the limiter is revealed. Press limiter and remove stock to access battery compartment.

2. Install battery and reinstall butt stock.


8 Butt Stock Adjustment

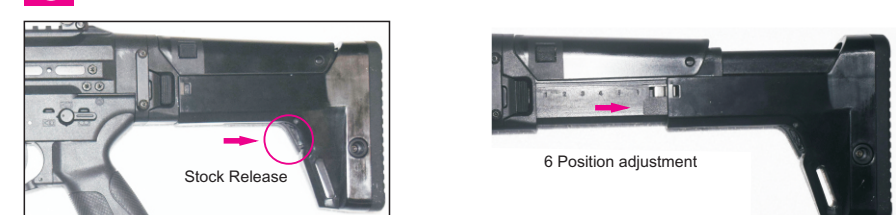

1. Press stock release and extend stock to suit (six positions available).


4

9 Cheek Rest Adjustment

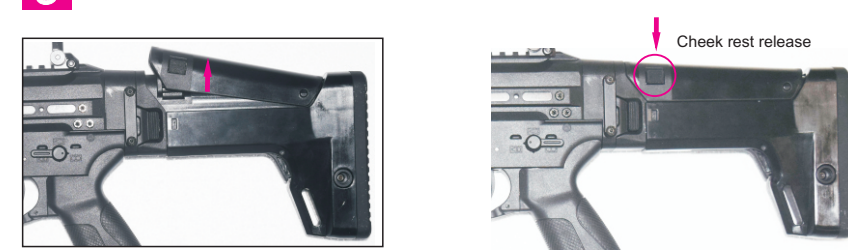

1. Press and hold cheek rest release then pull the cheek rest up.
2. To return cheek rest to rest position, press and hold cheek rest release and push the cheek rest down.

10 Folding Stock

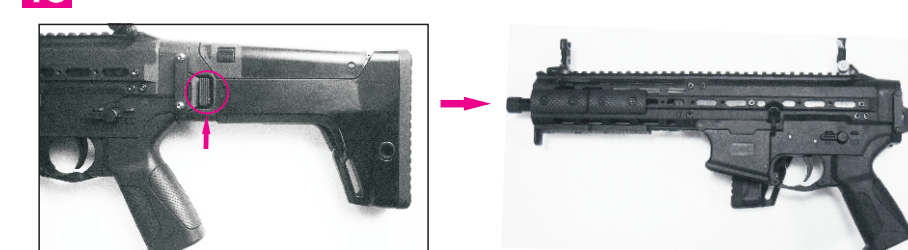

1. Press folding stock release and fold stock to the side.

11 Setting The Magazine



1. Press the magazine release button and take out the magazine.

2. Insert the BB bullets with the speed loader.

Warning


Always use the Double Eagle BB Bullet for this air gun. We shall not be responsible for any damage and accidents arising from use of inferior BBs.



5


12 Sight Adjustment

- Rotate elevation adjustment wheel to raise or lower the front sight post.
- Rotate windage adjustment wheel on the side of the rear sight to adjust windage.

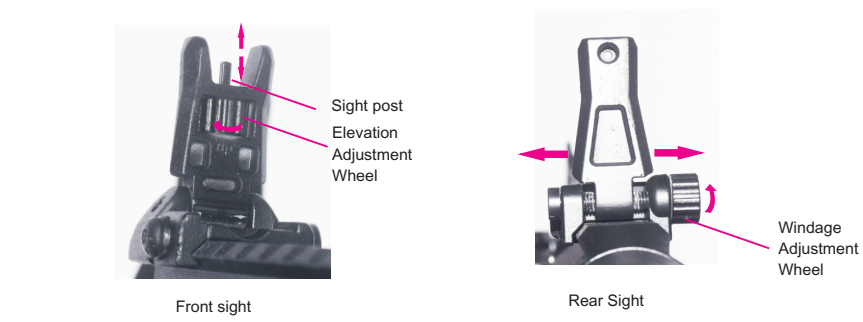

13 Variable Hop Up System


- Put the Charging Handle backward and fix it at the end position.
- Locate the Hop-Up Adjustment Knob at the right side of the receiver.
- Rotate the Hop-Up Adjustment knob to a desired position.
- Shoot a few pellets, exam the trajectory and make further adjustment if necessary.
- The best position is where the bullets fly horizontally, and the longest flying distance is obtained.

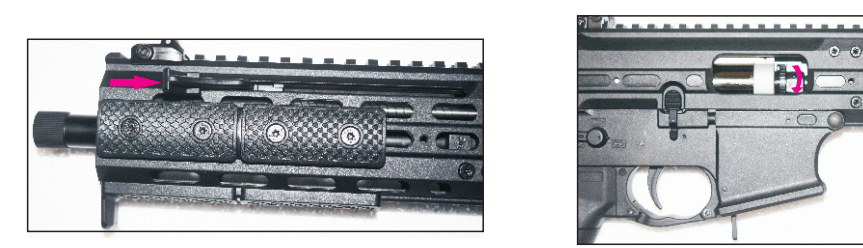

6



14 Maintenance

- Maintenance when Bullet Speed Becomes low
 - Apply Oil as shown below, using the cleaning rod and oiled cotton cloth. Insert cleaning rod into the barrel.
 - To complete the cleaning, use the cleaning rod (with cotton) as shown below. To remove excess oil.

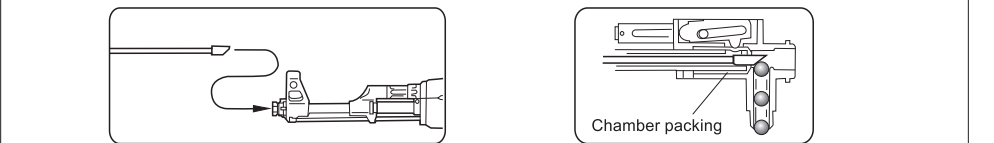

Warning

- Always carry out maintenance AFTER returning the hop up lever to the Normal position. (Hop-OFF)

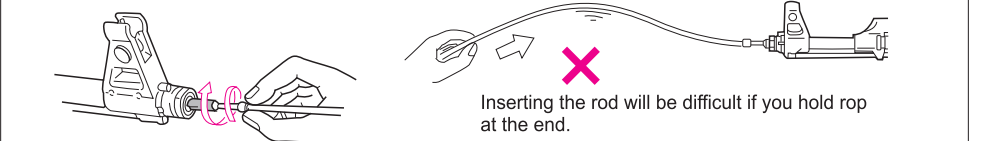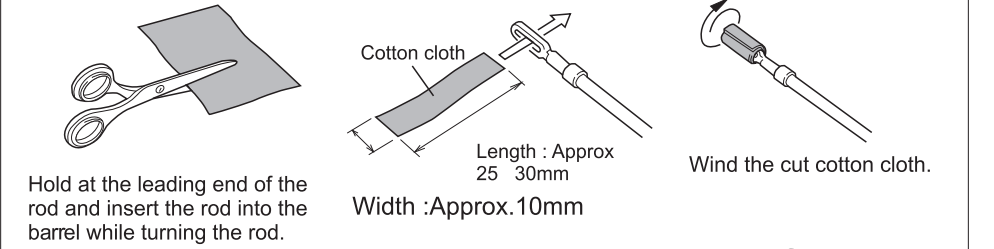

- Removing clogged bullets
 - Remove the magazine and return the hop up adjustment to the Normal position.
 - Insert the cleaning rod from the load edge of the barrel, be careful so that the angled part of the cleaning rod faces down, and remove clogged bullets.
- Normal Maintenance
 - Keep the rifle in clean condition.
 - Never use dirty, damaged or distorted bullets.
 - Regularly clean the barrel with soft clean cloth.



For more information pls visit:
[https:// www.DEAIRSOFT.COM](https://www.deairsoft.com)

