



CO2 Cartridge is not included  
12g  
MADE IN TAIWAN



## AAKCCB88、89 系說明書

AAKCCB88、89 INSTRUCTION MANUAL

KWC® KIEN WELL TOY INDUSTRIAL CO., LTD  
www.kwcgun.com

台南市仁德區義林路168巷89號  
NO.89, LN. 168, YILIN RD.,  
RENDE DIST., TAINAN CITY  
71752, TAIWAN (R.O.C.)  
TEL : +886-6-2798175  
FAX : +886-6-2798176  
sales@kwcgun.com  
www.kwcgun.com

## 操作/OPERATION


### 操作說明 OPERATION

1. 取出彈匣  
RELEASE MAGAZINE.



- ▲ 注意: 請勿使彈匣直接掉落地面, 以防止變形或損壞。
- ▲ CAUTION: Magazine falling directly on the ground could cause deform or damage on it. Please be aware.

2. CO2小鋼瓶12g的使用  
INSTALLING 12G CO2 CARTRIDGE  
逆時針轉出彈匣底內件後, 置入小鋼瓶B, 再以順時針方向鎖緊彈匣底內件A。當刺破鋼瓶出氣時, 請快速鎖緊。  
Turn the magazine cap out counter-clockwise and place CO2 cartridge B inside the magazine. Rapidly turn the screw A clockwise when piercing the cartridge in the magazine.

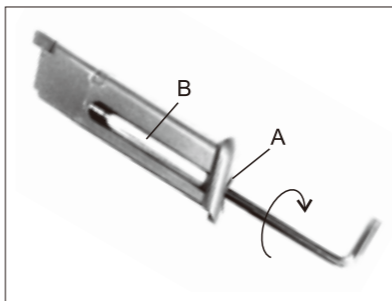

- ▲ 注意: 為維護彈匣使用壽命, 請盡可能不要殘留CO2氣體於彈匣內。
- ▲ CAUTION: To protect your magazine, please release all of the CO2 out of the magazine after every use.

3. 填裝B.B彈  
LOADING BBS  
為了使擊發順暢, 填裝方法是讓B.B彈在彈匣中一粒接著一粒。  
For smooth shooting, Load BBs one by one.

- ▲ 注意: 彈匣最多可裝16發B.B彈, 如強行裝入更多, 可能造成不當損壞及無法上膛, 請注意。
- ▲ CAUTION: Magazine max capacity is 16 rounds. Loading more than this quantity could bring malfunctions.

4. 彈匣上膛  
INSERTING THE MAGAZINE  
將裝好B.B彈的彈匣插入槍身往上推入, 直到彈匣卡榫發出“卡嗒”為止。  
Insert fully loaded magazine in the airsoft until you hear the sound of “CLICK”.

5. B.B彈上膛  
CHAMBERING THE BB  
將上蓋往後拉到底, 放開上蓋則上蓋會自動回位, 同時亦將B.B彈送上膛完成射擊準備。  
Pulling the slide back. When the slide has been pulled completely back, release the slide without pushing and the BBs will be chambered.



- ▲ 注意: 拉動上蓋時, 請勿將手指扣住扳機, 以免發生不當射擊, 造成危險。
- ▲ CAUTION: The gun is now cocked and will fire when the trigger is pulled. Be careful not to fire accidentally.

6. 保險切換  
SWITCH SAFETY




- ▲ 注意: 必須在上膛狀態下保險才可關閉
- ▲ CAUTION: Safety can only be turned on when this airsoft is cocked.




- ▲ 注意: 上蓋滑動時, 注意縫隙夾到手指。
- ▲ CAUTION: This airsoft has a realistic blowback feature. Be careful of the pinch point.

7. KCB-88後準星調整  
KCB-88 Rear sight adjustment

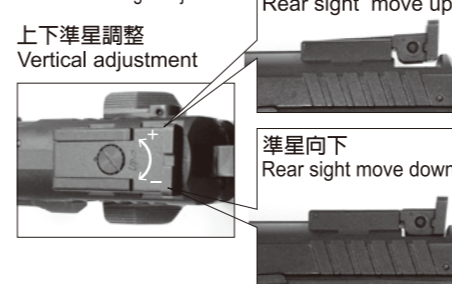

- 左右準星調整  
Horizontal adjustment

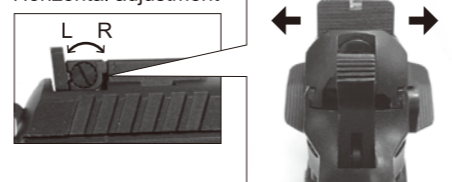

8. 射擊  
SHOOTING


對準目標區後扣下扳機, 則B.B彈將被射擊出去。  
Aim the target and pull the trigger to shoot.



- ▲ 注意: B.B彈用完時, 上蓋會後定卡住。
- ▲ CAUTION: hold open function as real pistol.

### 拆解/DIS-ASSEMBLY

1. KCB-89系列需先卸下鏡橋, 以方便拆解  
Please take off the mount on KCB89 before disassemble the gun

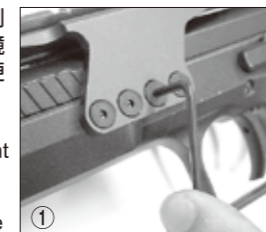

2. 按下卡榫, 取出彈匣  
Press the magazine catcher to release the magazine




3. 退上蓋至導管卡榫  
Pull the Slide Stop until the slide stop lock the slide



4. 壓下槍身右面卡榫  
Press the pin on the right side of frame.



5. 導管卡榫左面往上推, 上蓋即可取出  
Push the Slide Stop from left side of pistol to take off the Slide.

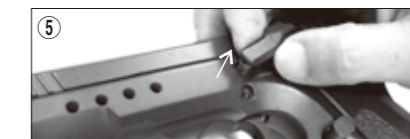

6. HOP UP調整 adjust HOP UP system.




### 故障的原因與排除 BREAK DOWN FAQ

- \* 卡彈可能原因:  
the reason for BB jam :  
a. 裝彈排列不整齊  
the BB in the magazine does not arrange very well.  
b. 不良B.B彈  
bad quality BB  
c. 空擊發易造成零件損耗, 請避免此動作。  
Please avoid dry firing, for it could cause parts deformed or damage.



- \* 排除: 將上蓋往後拉, 向下倒出即可。  
elimination: pull the slide back and pour the BB out from slide.

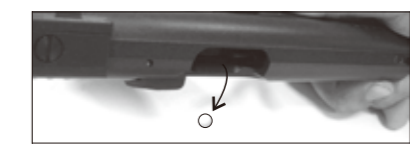

- \* 射擊過程中偶而會發生, 在作動時上蓋突然停止無法作動, 而擊鐵回到原位, 彈匣中仍有足夠瓦斯和B.B彈。  
In the shooting, sometimes you will meet with Slide and Hammer Stopping unexpectedly.



- \* 排除: 此時並非故障, 只需重新上膛便可繼續使用。  
SOLUTION: This is not the failure. Just reload it and operate again.

### 保養及維護 MAINTENANCE GUIDE

當射擊約2000發時, 建議你如圖所示, 以KWC出品之矽油脂適量在上蓋與本體滑動接觸面及擊鐵、撞針作動處潤滑, 以利滑動。  
We recommend you to use the KWC's lube oil to spray into the position as picture such as firing pin and track when you shoot the gun over 2,000 BB pellets.



# WARNING 警告

## 請務必嚴格遵守 使用說明指導書 READ THIS OWNER'S MANUAL COMPLETELY.


此低動能遊戲用槍是針對喜愛射擊運動的消費者所開發。避免因使用方法不正確或改造所發生的故障或事故，請務必詳讀說明書，正確的操作享受愉快的射擊運動。

- 除了發射時外，不要將手指頭掛在板機上。
- 選擇安全與適當標靶
- 在非使用期間，請保持保險關閉且退彈的狀態，就算在非使用狀態，也要如同其已裝彈。
- 如任何的機械產品，槍的保險也可能失效。即使在保險關閉的狀態下也請小心的操作此槍，請勿將槍口對人。
- 千萬不要對堅硬或平坦表面、水面射擊，以避免跳彈。
- 請妥善保管產品在未成年孩童無法伸手取得的場所。
- 每次使用前後都應該檢查擋彈物，假如擋彈物表面有磨損失效或是反彈時請停止使用。
- 請使用高品質BB彈，請勿使用①口徑大於6mm②表面不平滑的③重複使用過的BB彈④非本說明書指定的發射物。
- 最高的使用及儲藏CO2小鋼瓶環境為50°C (122°F) 以內，高溫可能會造成CO2小鋼瓶過熱甚至爆炸。
- 檢查任何掉落之槍枝，以確保未影響其功能。



**This airsoft is intended for recreational or training purposes. To prevent improper handling, modification or alteration causing malfunction or accident, please read the owner's manual carefully. Enjoy the pleasant shooting experience by proper operation.**

- Do not put your finger on the trigger except shooting.
- Please choose safe and proper target.
- Please always keep the airsoft on safe and unloaded when not using.
- Like all mechanical devices, an airsoft safety can fail. Always handle the airsoft safely even when the safety is "on safe". Never point the airsoft at any people.
- Avoid ricochet. Never shoot at a hard or flat surface or at water.
- Keep the airsoft out of reach for small children.
- Your backstop should be inspected for wear before and after each use. Discontinue use of the backstop if surface shows signs of failure or ricochet.
- Only use high quality BB. Never use ①BB diameter larger than 6mm②BB with unsmoothed surface③reused BB that has been fired④incorrect projectiles not design for this airsoft
- Do not expose CO2 cartridges to heat or store them at temperatures above 50°C (122°F). CO2 cartridges may over heat or explode at temperatures above 50°C (122°F).
- Check any gun that has been dropped to ensure that its function has not been affected.

- ★使用玩具槍前，請務必戴上保護眼鏡或面罩。
- ★Always wear eye protection when using airsoft.

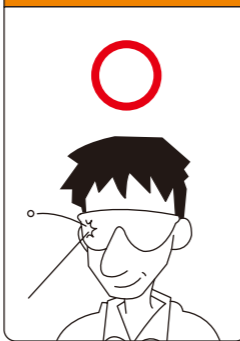

- ★不可攜帶玩具槍在公共場所行走，請務必裝在袋子或盒子內。
- ★Always transport an airsoft in a locked carrying case. Make sure it is unloaded and on safe.

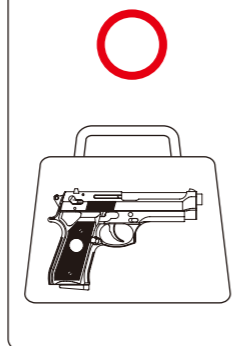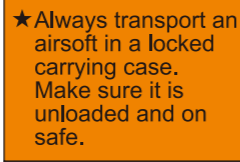


- ★使用玩具槍前，請務必詳讀說明書內容。
- ★Read the owner's manual before using the airsoft.




- ★請不要由槍口向內探視。
- ★To Avoid accidental discharge, do not look directly into the barrel.



- ★請不要在公開場合使用玩具槍，也請不要拿玩具槍對準人或動物。
- ★Never brandish or aiming this airsoft at any people or domestic animals. Brandish this airsoft in public is dangerous and may be a crime.

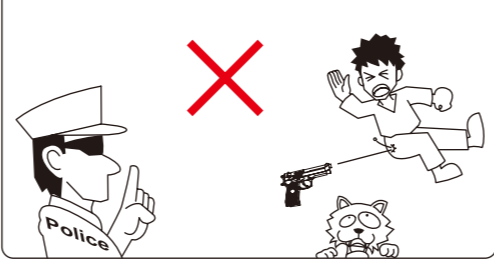

- ★請確認後再發射BB彈方向，附近無人或動物存在。
- ★Always be aware of your surrounding before and during shooting and select a safe area for target practice.

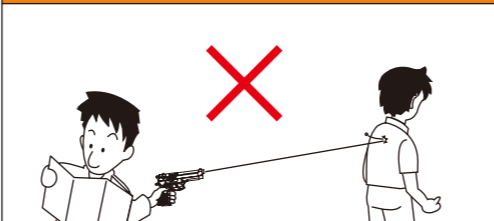

- ★不可任意改造或加工玩具槍，私自改造加工會造成產品損壞、保固失效，導致使用上不安全，甚至觸法送辦。
- ★Disassemble, modify, or alter of your airsoft may cause malfunction, void your warranty and may make it unsafe to use.




Do not display this pistol in public—it may confuse people and may be a crime. 請不要忘了，雖然自己知道這只是玩具，但不知道的人，會以為這是真槍。

# KCB-88、89 系列 零件表 KCB-88、89 SERIES PARTS LIST

NO.	零件名稱	UNIT	NO.	零件名稱	UNIT	NO.	零件名稱	UNIT
A01	上蓋	SLIDE	Z02	本體	FRAME	S02	射嘴回位壓簧	LOADING NOZZLE RECOIL SPRING
B02	扳機軸	TRIGGER PIN	Z03	擊鐵卡榫	HAMMER CATCH	S03	彈匣卡榫扭簧	MAGAZINE CATCH SPRING
B03	保險軸	SAFETY PIN	Z05	撞針卡榫	FIRING PIN CATCH	S04	止動片扭簧	SLIDE CATCH SPRING
B04	止動片扭簧軸	SLIDE CATCH SPRING PIN	Z07	上蓋止動片	SLIDE STOPPER	S05	擊鐵壓簧	HAMMER SPRING
B05	擊鐵箱軸	CHASSIS PIN	Z08	擊鐵	HAMMER	S06	擊鐵卡榫扭簧	HAMMER CATCH SPRING
B06	射嘴壓簧導軸	FLOATING NOZZLE SPRING SLEEVE	Z09	扳機	TRIGGER	S07	撞針扭簧	FIRING PIN SPRING
B10	內槍管	INNER BARREL	Z10	保險釋放件	SAFETY RELEASE	S08	扳機連桿拉簧	TRIGGER BAR SPRING
B11	擊鐵軸	HAMMER PIN	Z11	彈匣卡榫	MAGAZINE CATCH	S09	回位壓簧	RECOIL SPRING
B17	氣閥本體	VALVE FRAME	Z20	氣缸	CYLINDER	S10	撞針卡榫壓簧	FIRING PIN CATCH SPRING
B18	心棒後部	VALVE BACK	Z23	前準星	FRONT SIGHT	S12	心棒壓簧	VALVE SPRING
B22	彈匣上部軸	MAGAZINE RIB PIN	Z24	撞針	FIRING PIN	S14	保險壓簧	SAFETY SPRING
B30	氣瓶頂針	PUNCTURE VALVE	Z25	擊鐵箱左蓋	CHASSIS (L)	S19	氣流控制件壓簧	FLOATING VALVE SPRING
B33	心棒	VALVE	Z26	擊鐵箱中蓋	CHASSIS (M)	S21	後準星壓簧	REAR SIGHT SPRING
B85	後準星上下調整螺絲	REAR SIGHT ADJUST SCREW (UP & DOWN)	Z27	槍管左蓋	INNER BARREL CASE(L)	S22	後準星左右調整壓簧	REAR SIGHT ADJUST SPRING (L & R)
B86	後準星左右調整螺絲	REAR SIGHT ADJUST SCREW (L&R)	Z28	槍管右蓋	INNER BARREL CASE(R)	S25	導桿緩衝壓簧	BUMPER SPRING
B87	後準星座軸	REAR SIGHT BASE PIN	Z31	彈匣	MAGAZINE			
B215	氣瓶頂針迫緊	PUNCTURE VALVE PACKING	Z32	槍管導管	OUTER BARREL			
F01	擊鐵壓簧導桿	HAMMER STRUT SPRING	Z45	保險左	SAFETY (L)	E02	螺絲 M3X8XP0.5	SCREW
F03	扳機連桿	TRIGGER BAR	Z46	KCB79保險右	SAFETY (R)	E03	內六角螺絲 M3X10LXP0.5 黑	SCREW
F05	子彈迫緊調整片	RUBBER CHAMBER ADJUST	Z49	後準星	REAR SIGHT	E04	彈簧墊圈M3.0X0.6T	SPRING WASHER
F06	回位導桿華司	RECOIL BAR WASHER	Z50	後準星罩門	REAR SIGHT COVER	E05	彈簧梢2.5X8	SPRING PIN
P03	滑套射嘴	LOADING NOZZLE	Z51	槍柄座(CZ75)	GRIP BASE	E06	螺絲 內徑2.3X6 (束黑熱)	SCREW
P12	彈匣底座配件	MAGAZINE BASE JOINT	Z52	槍柄左(CZ75)	GRIP (L)	E08	螺絲 內徑2.3X8 (束黑熱)	SCREW
P13	彈匣上部 6mm	MAGAZINE RIB	Z53	槍柄右(CZ75)	GRIP (R)	E09	內六角止付螺絲 M3X3LXP0.5 黑	SCREW
P14	BAX可調旋鈕	BAX ADJUSTOR	Z56	槍管導桿 (CZ75) 長-89用	RECOIL GUIDE LEVEL (89)	E11	螺絲 內徑2.3X5 (束黑熱)	SCREW
P16	KMB氣流控制件	FLOATING VALVE	Z57	槍管導桿 (CZ75) 短-88用	RECOIL GUIDE LEVEL (88)	E12	鋼珠1.0	STEEL BALL
P17	彈匣滑粒6mm	MAGAZINE FOLLOWER	Z58	導桿套	RECOIL BAR CAP	E15	內六角螺絲 M4X8LXP0.7黑	SCREW
P21	彈匣卡榫固定件	MAGAZINE CATCH JOINT				E16	碟型墊圈M4X0.4T黑	SPRING WASHER
P60	彈匣底內件	MAGAZINE BOTTOM CAP	R01	氣嘴迫緊	GAS ROUTE PACKING	U2	彈匣組件	MAGAZINE UNIT
P61	心棒迫緊	VALVE PACKING	R02	子彈迫緊(BAX)	RUBBER CHAMBER	U3	氣閥組件	VALVE UNIT
P68	氣缸迫緊	CYLINDER PACKING	R06	O型環 S-4(PU90)	O-RING S-4	U4	氣瓶頂針組件	PUNCTURE VALVE UNIT
Z01	擊鐵箱右蓋	CHASSIS (R)	R07	O型環 1X6id(NBR)	O-RING 1X6	U5	擊鐵箱組件	CHASSIS UNIT
			R08	O型環 1X2id(NBR)	O-RING 1X2	U6	後準星組件	REAR SIGHT UNIT
			R09	O型環 2X15	O-RING 2X15	U8	扳機組件	TRIGGER UNIT
			S01	彈匣壓簧	MAGAZINE SPRING	X1	氣缸半組件	CYLINDER UNIT
						X2	內槍管組件	INNER BARREL UNIT

# KCB-88、89 系列 零件分解圖 KCB-88、89 SERIES EXPLODED VIEW

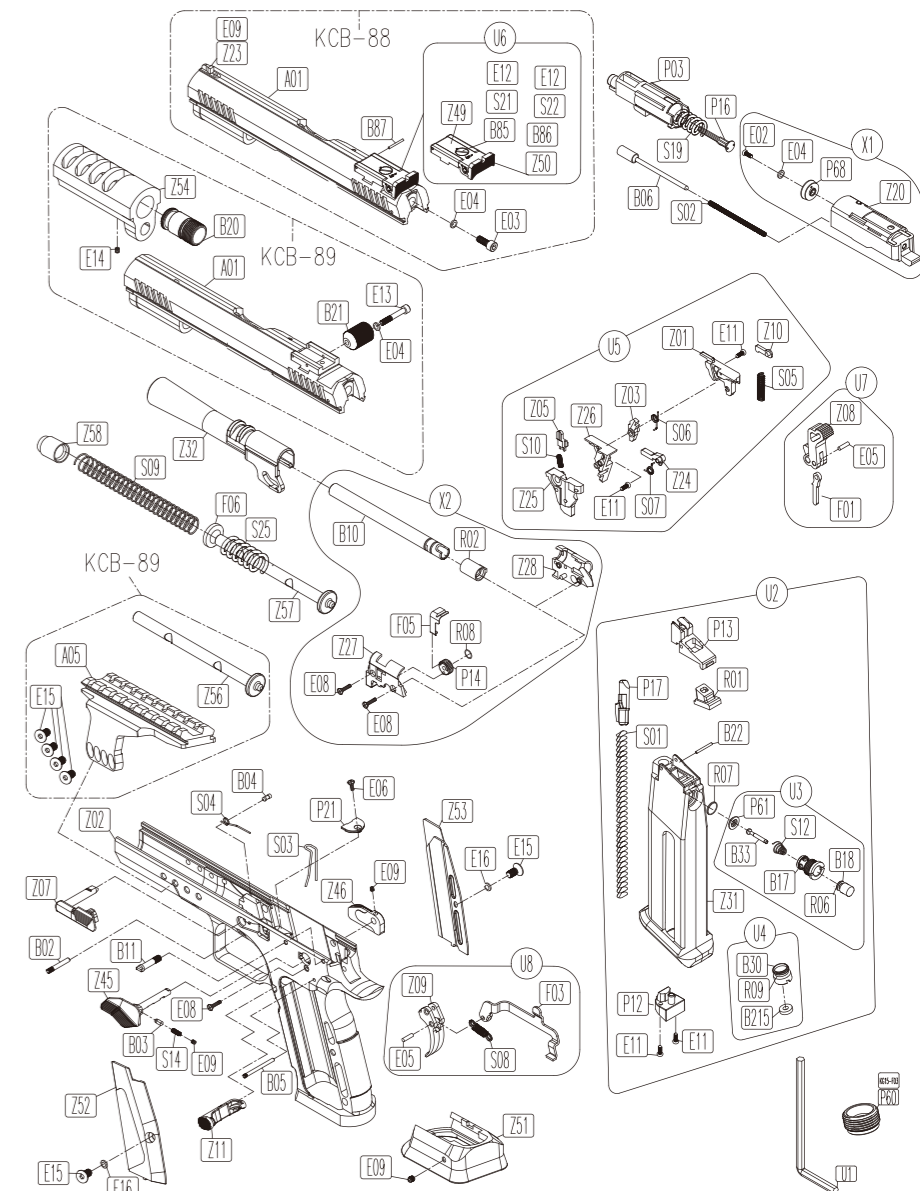

※零件有時為了改良而不經預告變更。  
Spare parts may be modified for quality improvement  
And such modification may be without advance notice.