

M1911



AAKCCB76系列說明書 AAKCCB76 INSTRUCTION MANUAL

KWT KIEN WELL TOY INDUSTRIAL CO., LTD
www.kwcgun.com

台南市仁德區義林路168巷89號
NO.89, LN. 168, YILIN RD.,
RENDE DIST., TAINAN CITY
71752, TAIWAN (R.O.C.)
TEL : +886-6-2798175
FAX : +886-6-2798176
sales@kwcgun.com
www.kwcgun.com



操作/OPERATION

操作說明

OPERATION

1. 取出彈匣
RELEASE MAGAZINE.




- ▲注意:請勿使彈匣直接掉落地面,以防止變形或損壞。
- ▲CAUTION: Magazine falling directly on the ground could cause deform or damage on it. Please be aware.

2. CO2小鋼瓶12g的使用
INSTALLING 12G CO2 CARTRIDGE:

逆時針轉出彈匣底內件後,置入小鋼瓶B,再以順時針方向鎖緊彈匣底內件A。當刺破鋼瓶出氣時,請快速鎖緊。

Turn the magazine cap out counter-clockwise and place CO2 cartridge B inside the magazine. Rapidly turn the screw A clockwise when piercing the cartridge in the magazine.

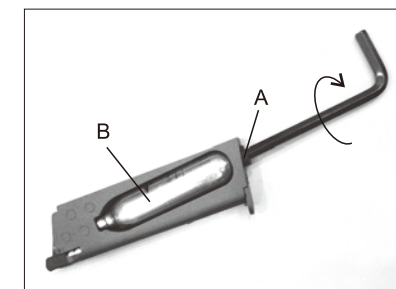

- ▲注意:為維護彈匣使用壽命,請盡可能不要殘留CO2氣體於彈匣內。
- ▲CAUTION: To protect your magazine, please release all of the CO2 out of the magazine after every use.

3. 填裝B.B彈
LOADING BBS

彈匣最多可裝15顆B.B彈,如強行裝入更多,可能造成不當損壞及無法上膛,請注意。

BB's max capacity is 15 rounds. If you load more than this quantity, you would bring any abnormal problems.



- ▲注意:裝雙排彈時請確認排列整齊,若有少子彈排列,射擊會造成空發現象。
- ▲CAUTION: Please make sure BB loading one by one for smooth shooting. If loading BB casually, it may cause the dry firing.

4. 彈匣上膛
INSERTING THE MAGAZINE

將裝好B.B彈的彈匣插入槍身上推入,直到彈匣卡榫發出"卡嗒"為止。

Insert fully loaded magazine in the airsoft until you hear the sound of "CLICK".

5. B.B彈上膛
CHAMBERING THE BB



將上蓋往後拉到底,放開上蓋則上蓋會自動回位,同時亦將B.B彈送上膛完成射擊準備。

Pulling the slide back. When the slide has been pulled completely back, release the slide without pushing and the BBs will be chambered.



- ▲注意:拉動上蓋時,請勿將手指扣住扳機,以免發生不當射擊,造成危險。
- ▲CAUTION: The gun is now cocked and will fire when the trigger is pulled. Be careful not to fire accidentally.

6. 保險切換
SWITCH SAFETY

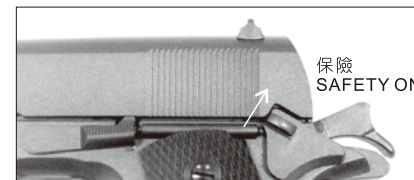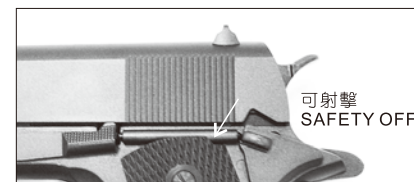

- ▲注意:必須在上膛狀態下保險才可關閉
- ▲CAUTION: Safety can only be turned on when this airsoft is cocked.



- ▲注意:上蓋滑動時,注意縫隙夾到手指。
- ▲CAUTION: This airsoft has a realistic blowback feature. Be careful of the pinch point.

7. 射擊
SHOOTING

對準目標區後扣下扳機,則B.B彈將被射擊出去。

Aim the target and pull the trigger to shoot.




- ▲注意: B.B彈用完時,上蓋會後定卡住。
- ▲CAUTION: hold open function as real pistol.

拆解/DIS-ASSEMBLY

1. 按下卡榫,取出彈匣
Press the magazine catcher to release the magazine


2. 退上蓋至導管卡榫
Pull the Slide back to the position as shown below.

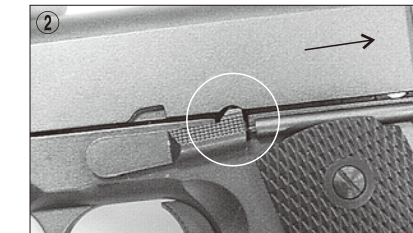


3. 壓下槍身右面卡榫
Press the pin on the right side of frame.



4. 導管卡榫左面往上推,即可取出上蓋
Pull up the Slide Stop from left side of the Frame to remove the slide.

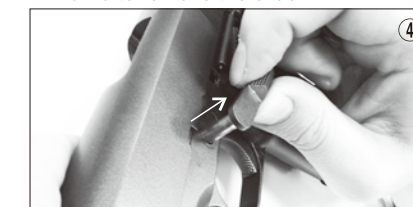

5. HOP UP調整
Adjust HOP UP system.

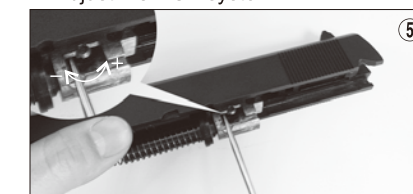


故障/BREAK DOWN

故障的原因與排除 BREAK DOWN FAQ

- * 卡彈可能原因:
the reason for BB jam :
- a. 裝彈排列不整齊
the BB in the magazine does not arrange very well.
- b. 不良B.B彈
bad quality BB
- c. 空擊發易造成零件損耗,請避免此動作。
Please avoid dry firing, for it could cause parts deformed or damage.



- * 排除:將上蓋往後拉,向下倒出即可。
Solution: pull the slide back and pour the BB out from slide.

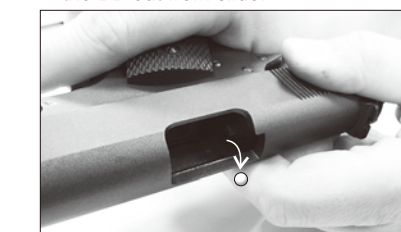

- * 射擊過程中偶而會發生,在作動時上蓋突然停止無法作動,而擊鐵回到原位,彈匣中仍有足夠瓦斯和B.B彈。
During the shooting process, sometimes the Slide and the Hammer stop unexpectedly.




- * 排除:此時並非故障,只需重新上膛便可繼續使用。
Solution: This is not a failure. Just reload and operate again.

保養及維護

MAINTENANCE GUIDE

當射擊約2000發時,建議你如圖所示,以矽油脂適當在上蓋與本體滑動接觸面及擊鐵、撞針作動處潤滑,以利滑動。

After every 2,000 BB shots, lubricating the Firing pin and Track as pictures below is recommended.

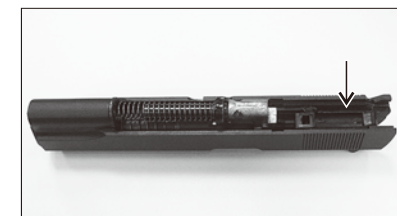

⚠ WARNING 警告

請務必嚴格遵守 使用說明指導書

For your safety, please read this manual carefully before use.


此低動能遊戲用槍是針對喜愛射擊運動的消費者所開發。避免因使用方法不正確或改造所發生的故障或事故，請務必詳讀說明書，正確的操作享受愉快的射擊運動。

- 除了發射時外，不要將手指頭掛在板機上。
- 選擇安全與適當標靶
- 在非使用期間，請保持保險關閉且退彈的狀態，就算在非使用狀態，也要如同其已裝彈。
- 如任何的機械產品，槍的保險也可能失效。即使在保險關閉的狀態下也請小心的操作此槍，請勿將槍口對人。
- 千萬不要對堅硬或平坦表面、水面射擊，以避免跳彈。
- 請妥善保管產品在未未成年孩童無法伸手取得的場所。
- 每次使用前後都應該檢查擋彈物，假如擋彈物表面有磨損失效或是反彈時請停止使用。
- 請使用高品質BB彈，請勿使用①口徑大於6mm②表面不平滑的③重複使用過的BB彈④非本說明書指名的發射物。
- 最高的使用及儲藏CO2小鋼瓶環境為50°C(122°F)以內，高溫可能會造成CO2小鋼瓶過熱甚至爆炸。
- 檢查任何掉落之槍枝，以確保未影響其功能。


This airsoft is intended for recreational or training purposes. To prevent improper handling, modification or alteration causing malfunction or accident, please read the owner's manual carefully. Enjoy the pleasant shooting experience by proper operation.

- Do not put your finger on the trigger except shooting.
- Please choose safe and proper target.
- Please always keep the airsoft on safe and unloaded when not using.
- Like all mechanical devices, an airsoft safety can fail. Always handle the airsoft safely even when the safety is "on safe". Never point the airsoft at any people.
- Avoid ricochet. Never shoot at a hard or flat surface or at water.
- Keep the airsoft out of reach for small children.
- Your backstop should be inspected for wear before and after each use. Discontinue use of the backstop if surface shows signs of failure or ricochet.
- Only use high quality BB. Never use ①BB diameter larger than 6mm②BB with unsmoothed surface③reused BB that has been fired④incorrect projectiles not design for this airsoft
- Do not expose CO2 cartridges to heat or store them at temperatures above 50°C(122°F). CO2 cartridges may over heat or explode at temperatures above 50°C(122°F).
- Check any gun that has been dropped to ensure that its function has not been affected.


★使用低動能遊戲用槍前，請務必戴上保護眼鏡或面罩。
★Always wear eye protection when using airsoft.

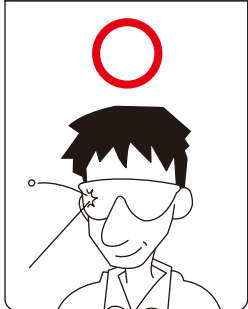

★使用低動能遊戲用槍前，請務必詳讀說明書內容。
★Read the owner's manual before using the airsoft.

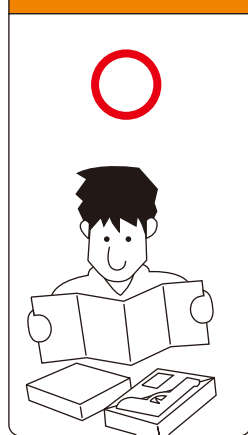

★不可攜帶低動能遊戲用槍在公共場所行走，請務必裝在袋子或盒子內。
★Always transport an airsoft in a locked carrying case.

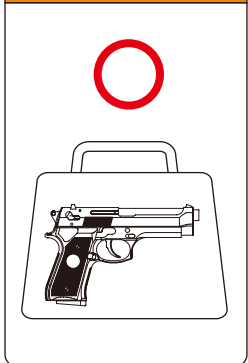


★請不要由槍口向內探視。
★To Avoid accidental discharge, do not look directly into the barrel.




★請不要在公開場合使用低動能遊戲用槍，也請不要拿低動能遊戲用槍對準人或動物。
★Never brandish or aiming this airsoft at any people or domestic animals. Brandish this airsoft in public is dangerous and may be a crime.



★請確認後再發射BB彈方向，附近無人或動物存在。
★Always be aware of your surrounding before and during shooting and select a safe area for target practice.

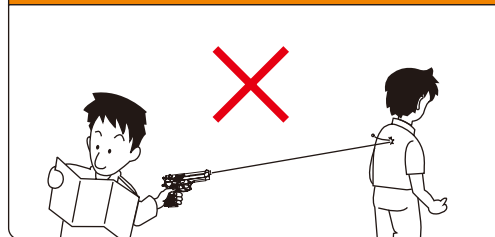

★不可任意改造或加工低動能遊戲用槍，私自改造加工會造成產品損壞、保固失效，導致使用上不安全，甚至觸法送辦。
★Disassemble, modify, or alter of your airsoft may cause malfunction, void your warranty and may make it unsafe to use.

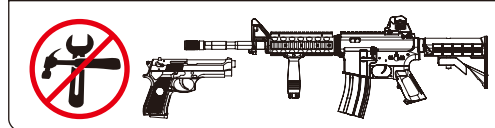


Do not display this pistol in public—it may confuse people and may be a crime. 請不要忘了，雖然自己知道這只是玩具，但不知道的人，會以為這是真槍。

AAKCCB76 系列 零件表 AAKCCB76 SERIES PARTS LIST

NO.	零件名稱	UNIT	NO.	零件名稱	UNIT	NO.	零件名稱	UNIT
P03	滑套射嘴	LOADING NOZZLE	Z28	槍管右蓋	INNER BARREL CASE(R)	KCB76-S01	彈匣壓簧	MAGAZINE SPRING
P08	氣缸迫緊	CYLINDER PACKING	Z29	保險卡榫導件	SAFETY CATCH GUIDE	S02	射嘴回位壓簧	LOADING NOZZLE RECOIL SPRING
P13	彈匣上部	MAGAZINE RIB	Z32	槍管導管	OUTER BARREL	S03	彈匣卡榫壓簧	MAGAZINE CATCH SPRING
P14	HOP-UP調整鈕	HOP-UP ADJUSTOR	Z42	彈匣底座配件	MAGAZINE BASE ACCESSORY	S04	止動片軸壓簧	SLIDE STOPPER PIN SPRING
P17	彈匣滑粒	MAGAZINE FOLLOWER				S05	擊鐵壓簧	HAMMER SPRING
P18	槍柄(左)	GRIP (L)	R01	氣嘴迫緊	GAS ROUTE PACKING	S06	握柄扣環	GRIP BUCKLE
P19	槍柄(右)	GRIP (R)	R02	子彈迫緊	RUBBER CHAMBER	S07	撞針扭簧	FIRING PIN SPRING
KMB75-P17	氣流控制件 (推動1.0J以上)	FLOATING VALVE	R04	導管壓簧緩衝件	OUTER BARREL SPRING BUFFER	S09	回位壓簧	RECOIL SPRING
KMB07-P41	心棒迫緊	VALVE PACKING	R05	O型環 S-8(NBR)	O-RING S-8	S10	撞針卡榫壓簧	FIRING PIN CATCH SPRING
			R06	O型環 S-4(PU90)	O-RING S-4	S12	心棒壓簧	VALVE SPRING
A01	上蓋	SLIDE	R07	O型環 1X6id(NBR)	O-RING 1X6id	S13	導管壓簧	OUTER BARREL SPRING
			R08	O型環 1X2id(NBR)	O-RING 1X2id	S22	扳機壓簧	TRIGGER SPRING
Z01	擊鐵箱	CHASSIS				E01	螺絲 M2.3X6 黑	SCREW 2.3X6
Z02	本體	FRAME	F01	擊鐵壓簧導桿	HAMMER SPRING GUIDE	E02	彈簧梢 1.5X6黑	SPRING PIN 1.5X6
Z03	擊鐵卡榫	HAMMER CATCH	F02	扳機回位彈片	TRIGGER RECOVER SPRING	E03	彈簧梢 2X8黑	SPRING PIN 2X8
Z04	擊鐵卡榫釋放件	HAMMER CATCH RELEASE	F03	扳機框	TRIGGER FRAME	E04	螺絲 M2.3X5 黑	SCREW 2.3X5#E04
Z05	撞針卡榫	FIRING PIN CATCH	F04	槍管導管壓簧配件	OUTER BARREL SPRING ACCESSORY	E05	螺絲 M3X8XP0.5	SCREW M3X8XP0.5
Z06	保險(左)	SAFETY(L)	F05	HOP-UP調整片	HOP-UP ADJUST PLATE	E06	內六角螺絲 M3X10LXP0.5 黑	SET SCREW M3X10LXP0.5
Z07	上蓋止動片	SLIDE STOPPER	B01	槍柄螺絲	GRIP SCREW	E07	螺絲 M2.6X6 黑 P0.45	SCREW M2.6X6 P0.45
Z08	擊鐵	HAMMER	B02	彈匣上部軸	MAGAZINE RIB PIN	E08	內六角止付螺絲 M12XP1.0X8L	MAGAZINE BOTTOM CAP
Z09	扳機	TRIGGER	B03	槍柄後罩軸	GRIP REAR COVER PIN	E09	螺絲 M3.0X6 黑 P0.5	SCREW M3.0X6 P0.5
Z10	握柄保險	GRIP SAFETY	B04	保險定位軸	SAFETY LOCATOR PIN	E10	彈簧墊圈 M3.0X0.6T	SPRING WASHER M3.0X0.6T
Z11	彈匣卡榫	MAGAZINE CATCH	B05	上蓋止動片軸	SLIDE STOPPER PIN	E11	螺絲 M2.3X5 黑	SCREW 2.3X5#E11
Z12	彈匣卡榫配件	MAGAZINE CATCH ACCESSORY	B08	上蓋止動片定位軸	SLIDE STOPPER LOCATOR PIN	X01	內槍管組件	INNER BARREL UNIT
Z13	槍柄後罩	GRIP REAR COVER	B10	內槍管	INNER BARREL	X02	氣缸組件	CYLINDER UNIT
Z14	擊鐵壓簧套	HAMMER SPRING SLEEVE	B15	上蓋止動片軸套	SLIDE STOPPER PIN SLEEVE	X03	擊鐵左蓋組件	CHASSIS UNIT (L)
Z15	擊鐵壓簧配件	HAMMER SPRING ACCESSORY	B16	氣瓶頂針	PUNCTURE VAVLE	U20	擊鐵組件	HAMMER UNIT
Z16	上蓋前罩	SLIDE FRONT BUSHING	B17	氣閥本體	VALVE FRAME	U22	扳機組件	TRIGGER UNIT
Z17	固定套	PLUG	B18	心棒後部	VALVE REAR	U12	氣閥組件	VALVE UNIT
Z20	氣缸	CYLINDER	B19	擊鐵箱軸	CHASSIS PIN	U13	氣瓶頂針組件	PUNCTURE VAVLE UNIT
Z22	後準星	REAR SIGHT	B21	槍管右蓋軸	OUTER BARREL AXLE (R)			
Z23	前準星	FRONT SIGHT	B23	射嘴壓簧導軸	LOADING NOZZLE SPRING GUIDE PIN			
Z24	撞針	FIRING PIN	B33	心棒	VALVE			
Z25	擊鐵箱左蓋	CHASSIS(L)	B215	氣瓶頂針迫緊	PUNCTURE VAVLE PACKING			
Z26	擊鐵箱中蓋	CHASSIS(MIDDLE)						
Z27	槍管左蓋	INNER BARREL CASE(L)						

AAKCCB76 系列 零件分解圖 AAKCCB76 SERIES EXPLODED VIEW

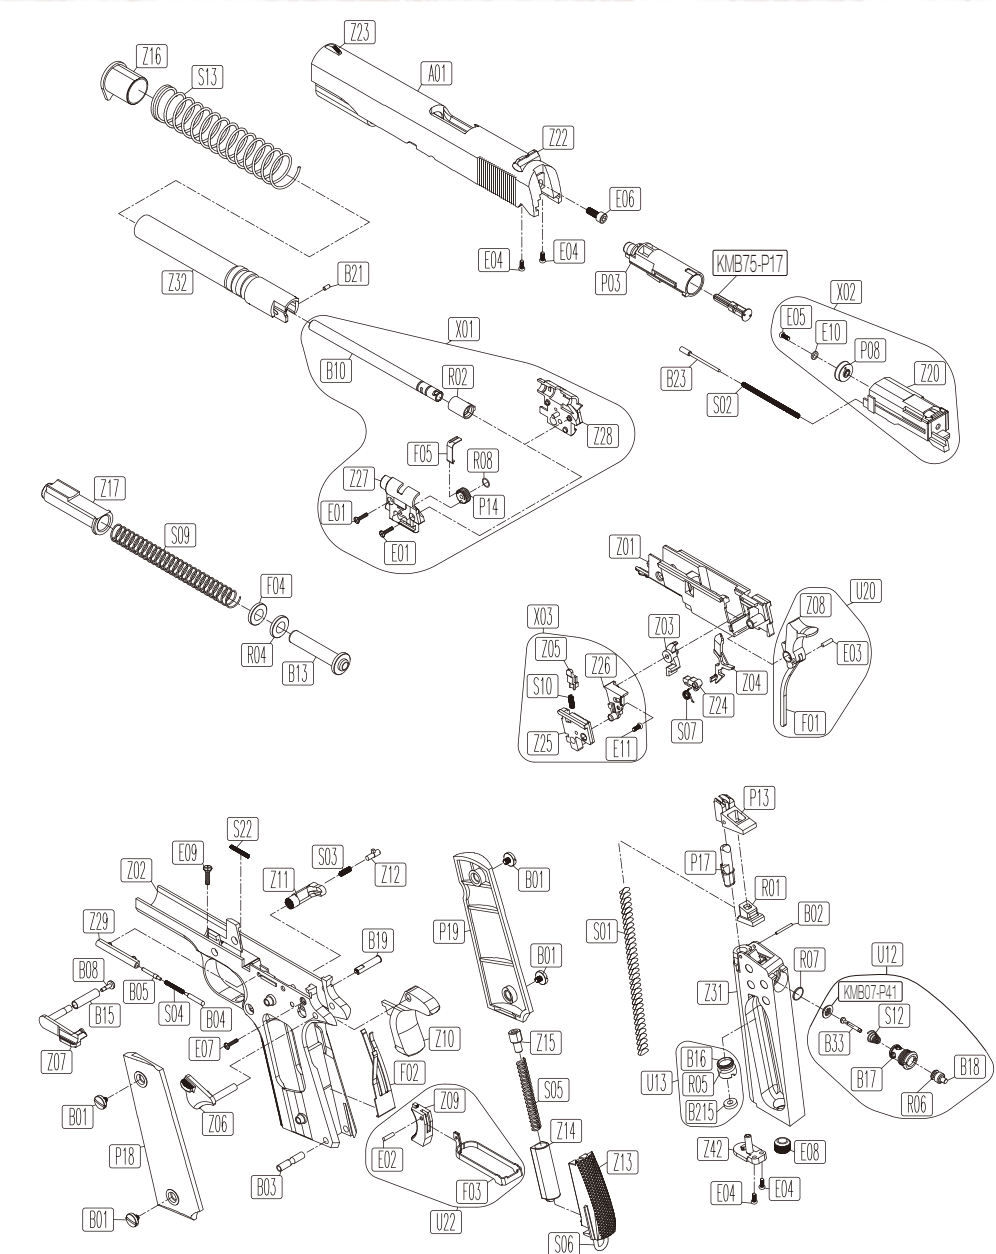

※零件有時為了改良而不經預告變更。
Spare parts may be modified for quality improvement
And such modification may be without advance notice.