

M40



CO2 Cartridge is not included
12g
MADE IN TAIWAN

AAKCCD48 系說明書 AAKCCD48 INSTRUCTION MANUAL

KWC® KIEN WELL TOY INDUSTRIAL CO., LTD
www.kwcgun.com

台南市仁德區義林路168巷89號
NO.89, LN. 168, YILIN RD.,
RENDE DIST., TAINAN CITY
71752, TAIWAN (R.O.C.)
TEL : +886-6-2798175
FAX: +886-6-2798176
sales@kwcgun.com
www.kwcgun.com




操作/OPERATION

射擊前的準備 BEFORE SHOOTING



1. 按下卡榫
Press the button.
2. 取出彈匣
Release the magazine.

3. 使用六角扳手反時針方向取出彈匣底內件。
Use hexagonal wrench to remove the magazine cap by counter clockwise.

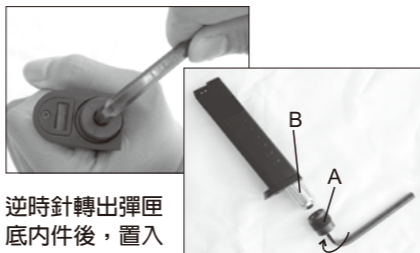

4. 逆時針轉出彈匣底內件後，置入小鋼瓶B，再以順時針方向鎖緊彈匣底內件A。當刺破鋼瓶出氣時，請快速鎖緊。
Turn the magazine cap A out counter-clockwise and place CO2 cartridge B inside the magazine. Rapidly turn the screw A clockwise when piercing the cartridge in the magazine.

為了使擊發順暢，填裝方法是讓BB彈在彈匣中一粒接著一粒。
For smooth shooting, Load BBs one by one.

5. 拉下滑粒。
Pull the magazine follower down.



6. 填裝BB彈
Loading BBs
為了使擊發順暢，填裝方法是讓BB彈在彈匣中一粒接著一粒。
For smooth shooting, Load BBs one by one.

7. 最多可裝15粒。
Maximum BB capacity is 15 rounds.

射擊 SHOOTING

1. 將裝好BB彈的彈匣插入槍身往上推入，直到彈匣卡榫發出“卡嗒”為止。
Insert fully loaded magazine in the airsoft until you hear the sound of “CLICK”.



2. 瞄準目標物扣引扳機，即可擊發。
Aim the target and pull the trigger.



▲ 注意：在長期不使用的狀態下，請將彈匣內氣體洩放掉。

▲ CAUTION : Release all the gas in the magazine when it will be unused for a long period of time.

安全裝置 SAFETY

可射擊
SAFETY OFF



保險
SAFETY ON




故障的原因與排除 BREAK DOWN FAQ

1. 不良的B.B彈是造成卡彈的原因，請使用品質優良的KWC B.B彈。
Bad quality BB is the main reason to cause BB jam. Please use the best quality KWC BB to avoid jamming problem.

2. 當卡彈時，請儘可能先取出彈匣，再在不傷槍管的軟質細棒（不可大於6mm直徑），從槍口置入清除。
When BB jammed, first please release the magazine from pistol then use a soft stick (diameter no bigger than 6mm) to clear up the barrel.

3. 空擊發易造成零件損耗，請避免此動作。
Please avoid dry firing, for it could cause parts deformed or damage.

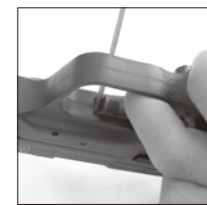

⚠ WARNING

請務必嚴格遵守 使用說明指導書
For your safety, please read this manual carefully before use.

此低動態遊戲用槍是針對喜愛射擊運動的消費者所開發。避免因使用方法不正確或改造所發生的故障或事故，請務必詳讀說明書，正確的操作享受愉快的射擊運動。

1. 除了發射時外，不要將手指頭掛在板機上。
2. 選擇安全與適當標靶
3. 在非使用期間，請保持保險關閉且退彈的狀態，就算在非使用狀態，也要如同其已裝彈。
4. 如任何的機械產品，槍的保險也可能失效。即使在保險關閉的狀態下也請小心的操作此槍，請勿將槍口對人。
5. 千萬不要對堅硬或平坦表面、水面射擊，以避免跳彈。
6. 請妥善保管產品在未未成年孩童無法伸手取得的場所。
7. 每次使用前後都應該檢查擋彈物，假如擋彈物表面有磨損失效或是反彈時請停止使用。
8. 請使用高品質BB彈，請勿使用①口徑大於6mm②表面不平滑的③重複使用過的BB彈④非本說明書指名的發射物。
9. 最高的使用及儲藏CO2小鋼瓶環境為50°C (122°F) 以內，高溫可能會造成CO2小鋼瓶過熱甚至爆炸。
10. 檢查任何掉落之槍枝，以確保未影響其功能。

4. 當扣引扳機時，此時B.B彈即同時在上膛階段，不可扣引一半時又回復，因為如此的動作，將有可能上膛兩發B.B彈。
Pulling trigger will load BB in the barrel. Therefore, please do not pull the trigger half way and release the trigger. This action could load 2 BBs in the pistol and cause jamming.

5. 使用一段時間後，請再次用中性矽油脂潤滑撞針及扳機軸心。
Please spray the lubricant into firing pin and trigger pin.

This airsoft is intended for recreational or training purposes. To prevent improper handling, modification or alteration causing malfunction or accident, please read the owner's manual carefully. Enjoy the pleasant shooting experience by proper operation.


1. Do not put your finger on the trigger except shooting.
2. Please choose safe and proper target.
3. Please always keep the airsoft on safe and unloaded when not using.
4. Like all mechanical devices, an airsoft safety can fail. Always handle the airsoft safely even when the safety is "on safe". Never point the airsoft at any people.
5. Avoid ricochet. Never shoot at a hard or flat surface or at water.
6. Keep the airsoft out of reach for small children.
7. Your backstop should be inspected for wear before and after each use. Discontinue use of the backstop if surface shows signs of failure or ricochet.
8. Only use high quality BB. Never use ① BB diameter larger than 6mm ② BB with smoothed surface ③ reused BB that has been fired ④ incorrect projectiles not design for this airsoft.
9. Do not expose CO2 cartridges to heat or store them at temperatures above 50°C (122°F). CO2 cartridges may over heat or explode at temperatures above 50°C (122°F).
10. Check any gun that has been dropped to ensure that its function has not been affected.

⚠ WARNING 注意事項

AAKCCD48 系列 零件表 AAKCCD48 SERIES PARTS LIST


AAKCCD48 系列 零件分解圖 AAKCCD48 SERIES EXPLODED VIEW

★使用低動能遊戲用槍前，請務必戴上保護眼鏡或面罩。
★Always wear eye protection when using airsoft.

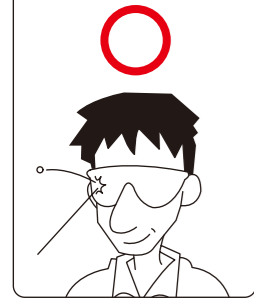

★不可攜帶低動能遊戲用槍在公共場所行走，請務必裝在袋子或盒子內。
★Always transport an airsoft in a locked carrying case. Make sure it is unloaded and on safe.


★請不要由槍口向內探視。
★To Avoid accidental discharge, do not look directly into the barrel.

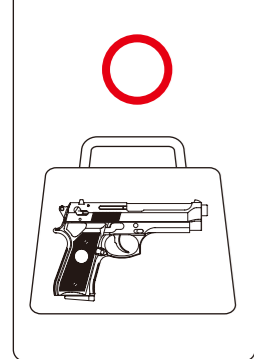


★使用低動能遊戲用槍前，請務必詳讀說明書內容。
★Read the owner's manual before using the airsoft.




★請不要在公開場合使用低動能遊戲用槍，也請不要拿低動能遊戲用槍對準人或動物。
★Never brandish or aiming this airsoft at any people or domestic animals. Brandish this airsoft in public is dangerous and may be a crime.

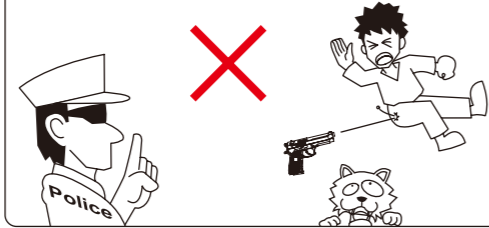

★請確認後再發射BB彈方向，附近無人或動物存在。
★Always be aware of your surrounding before and during shooting and select a safe area for target practice.

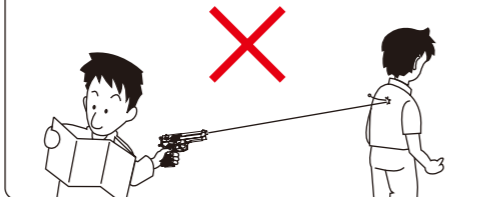

 
★不可任意改造或加工低動能遊戲用槍，私自改造加工會造成產品損壞、保固失效，導致使用上不安全，甚至觸法送辦。
★Disassemble, modify, or alter of your airsoft may cause malfunction, void your warranty and may make it unsafe to use.



Do not display this pistol in public—it may confuse people and may be a crime. 請不要忘了，雖然自己知道這只是玩具，但不知道的人，會以為這是真槍。

圖號	零件名稱	UNIT
P01	上蓋	SLIDE
P02	本體	FRAME
P04	上蓋止動片	SLIDE STOPPER
P17	保險(右)	SAFETY(R)
P19	握柄配件	GRIP PLUG
P29	上蓋後罩	SLIDE REAR CAP
P31	心棒蓋迫緊	VALVE CAP PACKING
P403	彈匣底內件	MAGAZINE BOTTOM CAP
P727	槍管套(短)	OUTER BARREL SLEEVE
P805	導管卡榫	BARREL CATCH
P807	彈匣卡榫	MAGAZINE CATCH
P817	彈匣滑粒	MAGAZINE FOLLOWER
P818	底座定位件	MAGAZINE BASE LOCATOR
Z468	扳機連動件	TRIGGER CONNECTOR
Z469	槍管連動件	BARREL TOW
Z802	撞針	FIRING PIN
Z803-1	扳機	TRIGGER
Z811	擊鐵箱(左)	CHASSIS(L)
Z812	擊鐵箱(右)	CHASSIS(R)
B19	心棒蓋	VALVE CAP
B33	氣瓶頂針(新規)	PUNCTURE VAVLE
B40	撞針軸套(新規)	FIRING PIN SLEEVE
B215	氣瓶頂針迫緊	PUNCTURE VAVLE PACKING
B461	槍管	BARREL
B465	心棒	VALVE
B801	扳機軸套	TRIGGER SLEEVE
F03	軸(擊鐵箱)	PIN(CHASSIS)#03
F04	軸(擊鐵箱)	PIN(CHASSIS)#04

圖號	零件名稱	UNIT
F401	心棒壓簧墊圈	VALVE SPRING GASKET
F408	撞針軸	FIRING PIN AXLE
F801	彈簧銷	SPRING PIN
F804	扳機連桿	TRIGGER BAR
S401	彈匣壓簧	MAGAZINE SPRING
S404	心棒壓簧	VALVE SPRING
S613	彈匣卡榫線簧	MAGAZINE CATCH SPRING
S801	扳機連桿拉簧	TRIGGER BAR SPRING
S803	撞針扭簧	FIRING PIN SPRING
S804	撞針緩衝扭簧(新規)	FIRING PIN BUFFER SPRING
S806	扳機扭簧	TRIGGER SPRING
S807	導桿壓簧	RECOIL SPRING
SM04	扳機連動件扭簧	TRIGGER CONNECTOR SPRING
SM05	扳機連動件壓簧	TRIGGER CONNECTOR SPRING
E01	E型扣環	E-RING
E02	⊕2.3X8束黑熱 螺絲	SCREW 2.3X8
E04	⊕⌀2.3X5尖黑熱 螺絲	SCREW 2.3X5
R01	子彈迫緊	RUBBER CHAMBER
R02	O形環 1.45X6.9id	O-RING 1.45X6.9
R03	O形環 1X5	O-RING 1X5
R04	O型環 1X4	O-RING 1X4
R05	O型環 0.8X11.3id	O-RING 0.8X11.3
R07	O型環 1X7	O-RING 1X7
R08	O形環 1X3	O-RING 1X3
U02	六角扳手	WRENCH
U1	內槍管組件	INNER BARREL UNIT
U2	氣瓶頂針組件	PUNCTURE VAVLE UNIT

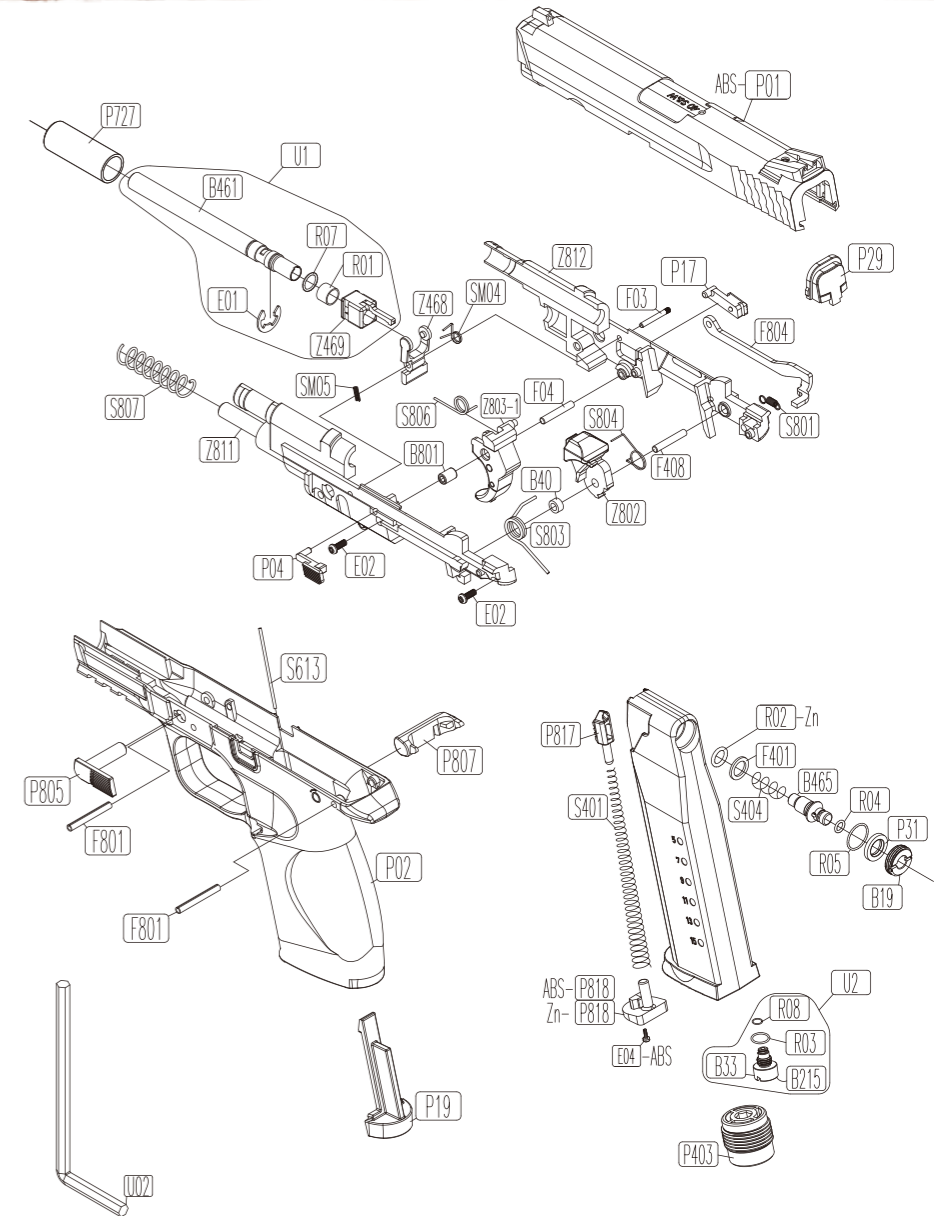

※零件有時為了改良而不經預告變更。
Spare parts may be modified for quality improvement
And such modification may be without advance notice.