

M92



CO2 Cartridge is not included
12g
MADE IN TAIWAN

AAKCCF23 系列說明書 AAKCCF23 INSTRUCTION MANUAL

KWC KIWEN WELL TOY INDUSTRIAL CO., LTD
www.kwcgun.com

台南市仁德區義林路168巷89號
NO.89, LN. 168, YILIN RD.,
RENDE DIST., TAINAN CITY
71752, TAIWAN (R.O.C.)
TEL : +886-6-2798175
FAX : +886-6-2798176
sales@kwcgun.com
www.kwcgun.com



操作/OPERATION

操作說明 OPERATION


1. 取出彈匣 RELEASE MAGAZINE



1. 按下卡榫
Press the button.
2. 取出彈匣
Release the magazine.


- ▲ 注意: 請勿使彈匣直接掉落地面, 以防止變形或損壞。
- ▲ CAUTION: Magazine falling directly on the ground could cause deform or damage on it. Please be aware.

2. CO2小鋼瓶12g的使用
INSTALLING 12G CO2 CARTRIDGE
逆時針轉出彈匣底內件後, 置入小鋼瓶B, 再以順時針方向鎖緊彈匣底內件A。當刺破鋼瓶出氣時, 請快速鎖緊。
Turn the magazine cap out counter-clockwise and place CO2 cartridge B inside the magazine. Rapidly turn the screw A clockwise when piercing the cartridge in the magazine.

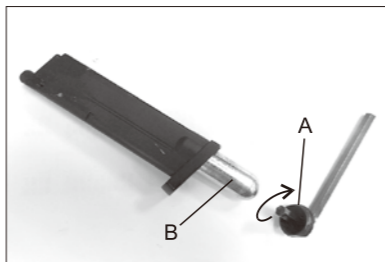

- ▲ 注意: 為維護彈匣使用壽命, 請盡可能不要殘留CO2氣體於彈匣內。
- ▲ CAUTION: To protect your magazine, please release all of the CO2 out of the magazine after every use.

3. 填裝B.B彈
LOADING BBS
彈匣最多可裝21發B.B彈, 如強行裝入更多, 可能造成不當損壞及無法上膛, 請注意。(分2種方式裝彈)
BB's max capacity is 21 rounds. If you load more than this quantity, you would bring any abnormal problems. (BB can be loaded in two ways.)

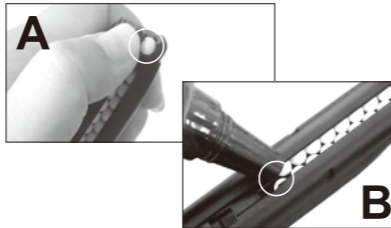


4. 彈匣上膛
INSERTING THE MAGAZINE
將裝好B.B彈的彈匣插入槍身上推入, 直到彈匣卡榫發出“卡嗒”為止。
Insert fully loaded magazine in the airsoft until you hear the sound of “CLICK”.

5. B.B彈上膛
CHAMBERING THE BB
將上蓋往後拉到底, 放開上蓋則上蓋會自動回位, 同時亦將B.B彈送上膛完成射擊準備。
Pulling the slide back. When the slide has been pulled completely back, release the slide without pushing and the BBs will be chambered.




- ▲ 注意: 拉動上蓋時, 請勿將手指扣住扳機, 以免發生不當射擊, 造成危險。
- ▲ CAUTION: The gun is now cocked and will fire when the trigger is pulled. Be careful not to fire accidentally.

6. 保險切換 SWITCH SAFETY

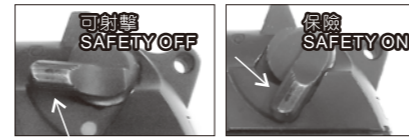

7. 關保險擊錘復位 SAFETY ON AND COCK DISCHARGE

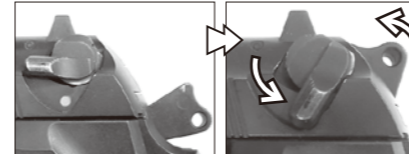

- ▲ 注意: 擊鐵會跟著關保險回位, 所有機械機構都有失誤的可能, 在關保險擊鐵復位時也請注意將槍口朝向安全的位置。
- ▲ CAUTION: The decocker will put hammer down; however, since all mechanisms can fail, it is still necessary to keep the muzzle of the gun pointed in a safe direction while decocking.

8. 單/連發切換
SWITCH SEMI AUTO AND FULL AUTO
將槍口向右在槍尾部有連發開關可以切換。Semi auto and full auto switch on pistol rear right side.

若是你購買的槍有連發系統, 請依照下圖示操作啟動連發系統
If your pistol has full auto function, you may also switch to full auto by instruction below.



- ▲ 注意: 上蓋滑動時, 注意縫隙夾到手指。
- ▲ CAUTION: This airsoft has a realistic blowback feature. Be careful of the pinch point.

9. 射擊
SHOOTING
對準目標區後扣下扳機, 則B.B彈將被射擊出去。
Aim the target and pull the trigger. Then the BB will be shot.




- ▲ 注意: B.B彈用完時, 上蓋會後定卡住。
- ▲ CAUTION: hold open function as real pistol.

拆解/DISASSEMBLY

1. 按下卡榫, 取出彈匣
Press the magazine catch to release the magazine.



2. 請按住右側的上蓋卡榫件, 將左面的上蓋卡榫往下扳後鬆開上蓋。
Push L16 from the right side and spin the slide catch down to unlock the slide.

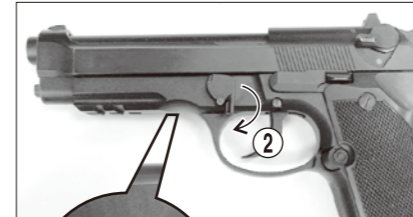


槍右側(L16)上蓋卡榫件。
Right side (L16) slide catch pin.

3. 往左滑出槍管, 本體和上蓋就可分離。
slide outer barrel to the left side to separate frame and slide



4. HOP UP調整。
adjust HOP UP system.

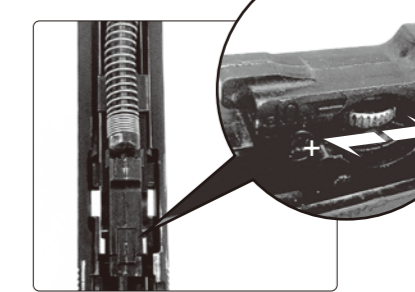


故障的原因與排除 BREAK DOWN FAQ

* 卡彈可能原因:
Possible reasons for BB jam:

- a. BB彈排列不整齊
BB dose not stack properly.
- b. 不良B.B彈
bad quality BB
- c. 空擊發易造成零件損耗, 請避免此動作。
please avoid dry firing as it could cause parts deformed or damage.





* 排除: 將上蓋往後拉, 向下倒出即可。
Solution: pull the slide back and pour the BB out from barrel.

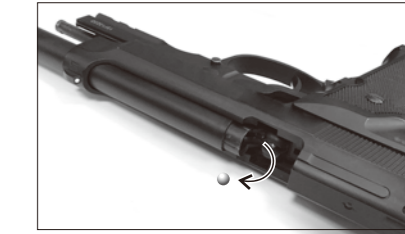

保養及維護 MAINTENANCE GUIDE

當射擊約2000發時, 建議你如圖所示, 以KWC出品之矽油脂適當在上蓋與本體滑動接觸面及擊鐵、撞針作動處潤滑, 以利滑動。
After every 2,000 BB shots, lubricate slide and frame track, hammer and firing pin is recommended. Please see picture below for suggested lubricate area.

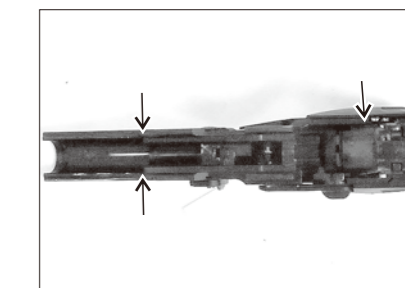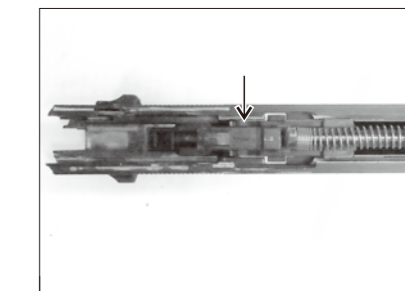

WARNING 警告

請務必嚴格遵守 使用說明指導書

For your safety, please read this manual carefully before use.


此低動能遊戲用槍是針對喜愛射擊運動的消費者所開發。避免因使用方法不正確或改造所發生的故障或事故，請務必詳讀說明書，正確的操作享受愉快的射擊運動。

- 除了發射時外，不要將手指頭掛在板機上。
- 選擇安全與適當標靶。
- 在非使用期間，請保持保險關閉且退彈的狀態，就算在非使用狀態，也要如同其已裝彈。
- 如任何的機械產品，槍的保險也可能失效。即使在保險關閉的狀態下也請小心的操作此槍，請勿將槍口對人。
- 千萬不要對堅硬或平坦表面、水面射擊，以避免跳彈。
- 請妥善保管產品在未成年孩童無法伸手取得的場所。
- 每次使用前後都應該檢查擋彈物，假如擋彈物表面有磨損失效或是反彈時請停止使用。
- 請使用高品質BB彈，請勿使用①口徑大於6mm②表面不平滑的③重複使用過的BB彈④非本說明書指定的發射物。
- 最高的使用及儲藏CO2小鋼瓶環境為50°C (122°F) 以內，高溫可能會造成CO2小鋼瓶過熱甚至爆炸。
- 檢查任何掉落之槍枝，以確保未影響其功能。


This airsoft is intended for recreational or training purposes. To prevent improper handling, modification or alteration causing malfunction or accident, please read the owner's manual carefully. Enjoy the pleasant shooting experience by proper operation.

- Do not put your finger on the trigger except shooting.
- Please choose safe and proper target.
- Please always keep the airsoft on safe and unloaded when not using.
- Like all mechanical devices, an airsoft safety can fail. Always handle the airsoft safely even when the safety is "on safe". Never point the airsoft at any people.
- Avoid ricochet. Never shoot at a hard or flat surface or at water.
- Keep the airsoft out of reach for small children.
- Your backstop should be inspected for wear before and after each use. Discontinue use of the backstop if surface shows signs of failure or ricochet.
- Only use high quality BB. Never use ①BB diameter larger than 6mm②BB with unsmoothed surface③reused BB that has been fired④incorrect projectiles not design for this airsoft
- Do not expose CO2 cartridges to heat or store them at temperatures above 50°C (122°F). CO2 cartridges may over heat or explode at temperatures above 50°C (122°F).
- Check any gun that has been dropped to ensure that its function has not been affected.


- ★使用低動能遊戲用槍前，請務必戴上保護眼鏡或面罩。
- ★Always wear eye protection when using airsoft.

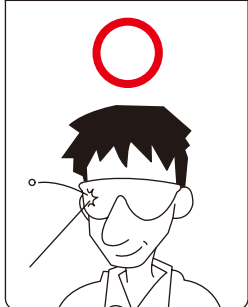

- ★使用低動能遊戲用槍前，請務必詳讀說明書內容。
- ★Read the owner's manual before using the airsoft.

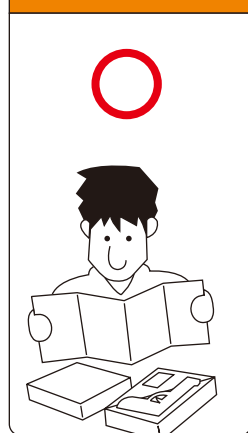


- ★不可攜帶低動能遊戲用槍在公共場所行走，請務必裝在袋子或盒子內。
- ★Always transport an airsoft in a locked carrying case. Make sure it is unloaded and on safe.

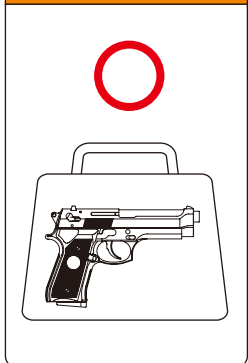


- ★請不要由槍口向內探視。
- ★To Avoid accidental discharge, do not look directly into the barrel.




- ★請不要在公開場合使用低動能遊戲用槍，也請不要拿低動能遊戲用槍對準人或動物。
- ★Never brandish or aiming this airsoft at any people or domestic animals. Brandish this airsoft in public is dangerous and may be a crime.

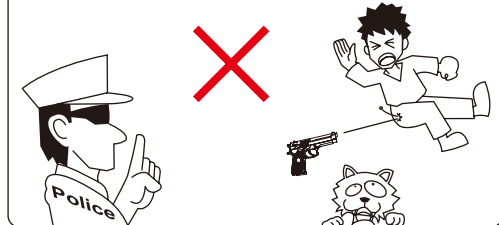

- ★請確認後再發射BB彈方向，附近無人或動物存在。
- ★Always be aware of your surrounding before and during shooting and select a safe area for target practice.

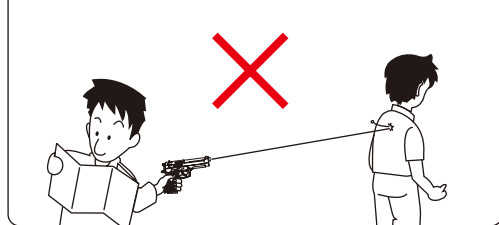

- ★不可任意改造或加工低動能遊戲用槍，私自改造加工會造成產品損壞、保固失效，導致使用上不安全，甚至觸法送辦。
- ★Disassemble, modify, or alter of your airsoft may cause malfunction, void your warranty and may make it unsafe to use.

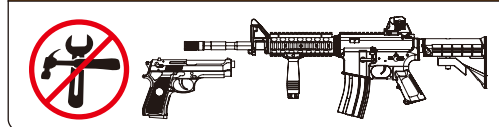


Do not display this pistol in public—it may confuse people and may be a crime. 請不要忘了，雖然自己知道這只是玩具，但不知道的人，會以為這是真槍。

AAKCCF&B23 系列 零件表 AAKCCF&B23 SERIES PARTS LIST

NO.	零件名稱	UNIT	NO.	零件名稱	UNIT	NO.	零件名稱	UNIT
P01	滑套射嘴	LOADING NOZZLE	Z40	氣缸	CYLINDER	S10	彈匣卡榫壓簧	MAGAZINE CATCH SPRING
P02	氣流控制件	FLOATING VALVE	Z41	保險(右)	SAFETY (R)	S11	保險回位壓簧	SAFETY RECOIL SPRING
P03	彈匣上部	MAGAZINE RIB				S12	單連發切換件扭簧	FULL/SEMI AUTO SWITCH PLATE SPRING
P04	彈匣滑粒	MAGAZINE FOLLOWER	KCB22-R01	子彈迫緊	RUBBER CHAMBER	S13	擊鐵壓簧	HAMMER SPRING
P05	彈匣滑粒卡住配件	MAGAZINE FOLLOWER CATCH	R01	氣嘴迫緊	GAS ROUTE PACKING	S14	擊鐵卡榫扭簧	HAMMER CATCH SPRING
P08	彈匣底座配件	MAGAZINE BASE JOINT	R03	氣缸迫緊	CYLINDER PACKING	S15	上蓋卡榫壓簧	SLIDE CATCH SPRING
P10	上蓋緩衝件	SLIDE BUFFER	G007	O形環 1X5	O-RING 1X5	S16	扳機扭簧	TRIGGER SPRING
P11	氣缸迫緊配件	CYLINDER PACKING ACCESSORY	G008	O形環 1X6	O-RING 1X6	S17	單連發選擇鈕壓簧	FULL/SEMI AUTO SWITCH BUTTON SPRING
P13	槍柄(左)	GRIP (L)	G016	O形環 S-4(黃)	O-RING S-4	S18	上蓋止動件扭簧	SLIDE STOPPER SPRING
P14	槍柄(右)	GRIP (R)	G038	O形環 2X13	O-RING 2X13	S19	擊鐵卡榫釋放壓簧	HAMMER CATCH RELEASE SPRING
						S20	調整鈕壓簧	HOP UP ADJUST SPRING
						S23	氣流控制件壓簧(增速版)	FLOATING VALVE SPRING
A01	上蓋	SLIDE	L2	槍柄螺絲	GRIP SCREW			
Z01	本體	FRAME	L01	擊鐵軸套	HAMMER SLEEVE	EA106	止付螺絲3.0X4黑	SET SCREW 3.0X4
Z02	槍身內套	BARREL BASE	L03	擊鐵卡榫軸套	HAMMER CATCH PIN SLEEVE	E01	⊕ⅢM2.6*8L*P0.45	SCREW M2.6*8L*P0.45
Z03	擊鐵箱(左)	CHASSIS (L)	L04	擊鐵箱軸	CHASSIS PIN	E02	⊕ⅢM2*L15*P0.4	SCREW M2*L15*P0.4
Z04	擊鐵箱(右)	CHASSIS (R)	L05	單連發切換鈕螺絲	FULL/SEMI AUTO SWITCH PLATE SCREW	E03	⊕ⅢM2*L8*P0.4	SCREW M2*L8*P0.4
Z05	扳機	TRIGGER	L06	單連發切換鈕配件軸	FULL/SEMI AUTO SWITCH PLATE ACCESSORY PIN	E04	⊕半丸M3X8X0.5耐漆	SCREW M3X8X0.5
Z06	擊鐵	HAMMER	L07	連發控制件軸	FULL AUTO CONTROL PIN	E06	E型扣環-E1.2	E-RING
Z07	單發擊鐵卡榫	SEMI AUTO HAMMER CATCH	L08	扳機軸	TRIGGER PIN	E07	⊕Ⅲ2.3*5尖黑熟	SCREW 2.3*5
Z08	撞針	FIRING PIN	L09	擊鐵卡榫軸	HAMMER CATCH PIN	E08	⊕Ⅲ2.3*8黑熟	SCREW 2.3*8
Z09	撞針卡榫	FIRING PIN CATCH	L12	彈匣上部軸	MAGAZINE RIB PIN	E09	KG-03 鋼珠 φ2.5	BEARING φ2.5
Z10	上蓋卡榫	SLIDE CATCH	L14	內槍管	INNER BARREL	E10	彈簧墊圈M3.0X0.6T	SPRING WASHER M3.0x0.6T
Z13	保險	SAFETY	L16	上蓋卡榫卡件	SLIDE CATCH PIN	E11	⊕Ⅲ2.6*L5*P0.45	SCREW 2.6*L5*P0.45
Z14	連發擊鐵卡榫	FULL AUTO HAMMER CATCH	L18	子彈迫緊調整件螺絲	HOP UP ADJUST SCREW	E41	彈簧銷2X8L鍍黑	SPRING PIN 2X8L
Z15	切換連桿	SWITCH PLATE	L21	扳機連桿扭簧軸	TRIGGER BAR SPRING PIN			
Z16	單連發切換鈕配件	FULL/SEMI AUTO SWITCH PLATE ACCESSORY	L22	滑套射嘴軸	LOADING NOZZLE PIN	F01	擊鐵釋放件	HAMMER RELEASE
Z17	單連發切換鈕	FULL/SEMI AUTO SWITCH PLATE	L29	外槍管固定軸	OUTER BARREL FIXTURE PIN	F02	擊鐵釋放件連動件	HAMMER RELEASE CONNECTOR
Z18	扳機連桿	TRIGGER BAR	L35	保險片固定軸	SAFETY PLATE FIXTURE PIN	F03	連發擊鐵卡榫連動件	FULL AUTO HAMMER CATCH CONNECTOR
Z19	擊鐵壓簧座	HAMMER SPRING BASE	L42	扳機軸套	TRIGGER SLEEVE	F04	擊鐵壓簧導桿	HAMMER SPRING BAR
Z20	上蓋止動件	SLIDE STOPPER	L43	保險連動件軸	SAFETY CONNECTOR PIN	F05	保險連動件	SAFETY CONNECTOR
Z21	彈匣卡榫	MAGAZINE CATCH	L44	擊鐵壓簧座軸(小)	HAMMER SPRING BASE PIN(S)	F06	扳機連桿固定件	TRIGGER BAR FIXTURE
Z22	彈匣卡榫配件(左)	MAGAZINE CATCH ACCESSORY (L)						
Z23	彈匣卡榫配件(右)	MAGAZINE CATCH ACCESSORY (R)						
Z24	背帶扣	STRAP RING	S02	撞針扭簧	FIRING PIN SPRING	U01	六角扳手	WRENCH
Z28	鋼瓶鎖緊件	MAGAZINE BOTTOM CAP	S03	擊鐵連桿壓簧	HAMMER BAR SPRING	X1	內槍管組件	INNER BARREL UNIT
Z33	槍管蓋(左)	INNER BARREL CASE (L)	S04	滑套射嘴回位壓簧	LOADING NOZZLE RECOIL SPRING	X2	氣缸組件	CYLINDER UNIT
Z34	槍管蓋(右)	INNER BARREL CASE (R)	S05	連發卡榫扭簧	FULL AUTO CATCH SPRING	U1	擊鐵組件	HAMMER UNIT
Z36	外槍管	OUTER BARREL	S06	回位導桿壓簧	RECOIL BAR SPRING	U2	氣瓶頂針組件	PUNCTURE VALVE UNIT
Z38	子彈迫緊調整件	HOP UP ADJUSTER	S07	切換連桿扭簧	SWITCH PLATE SPRING	U3	氣閥組件	VALVE UNIT
Z39	回位導桿	RECOIL BAR	S08	彈匣壓簧(6mm)	MAGAZINE SPRING			

AAKCCF&B23 系列 零件分解圖 AAKCCF&B23 SERIES EXPLODED VIEW

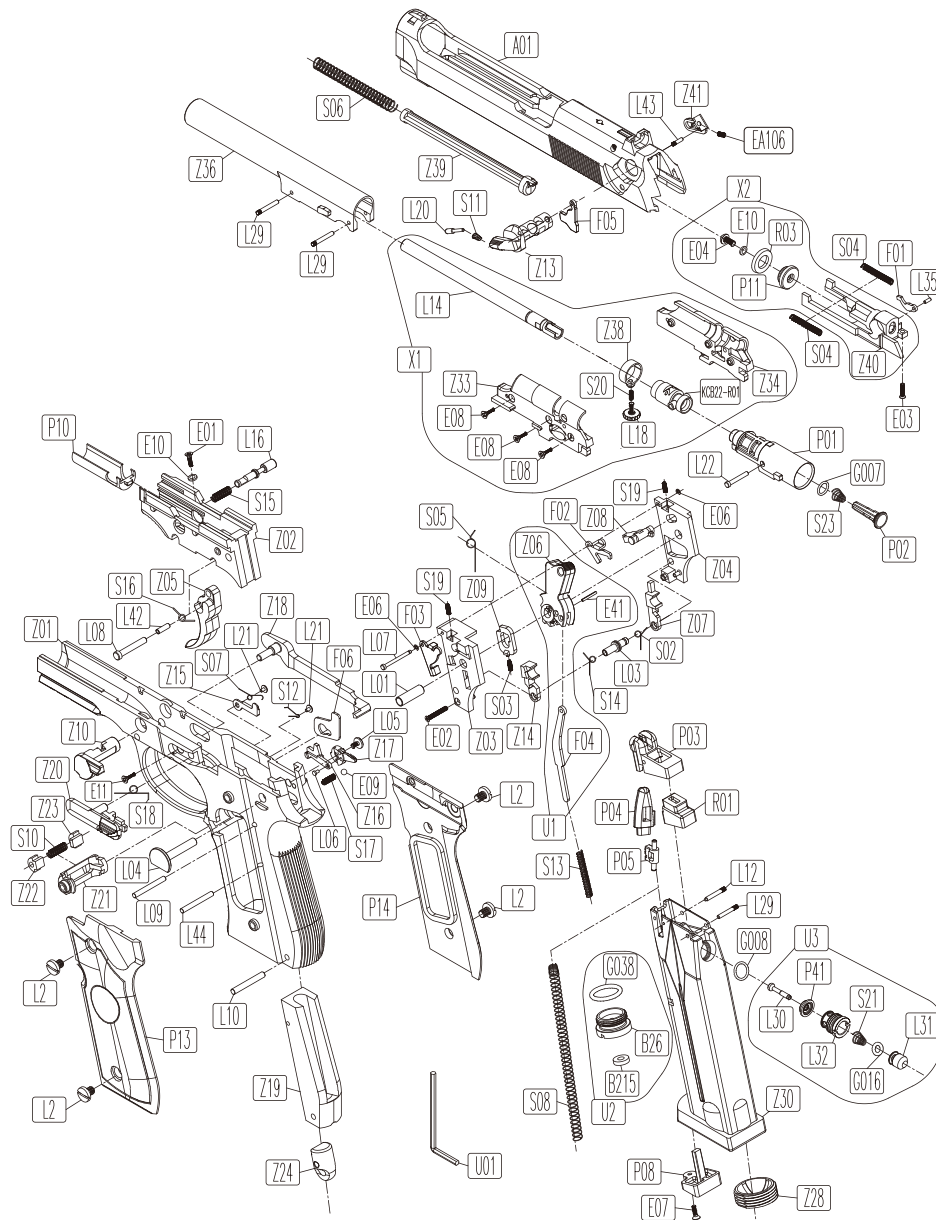

※零件有時為了改良而不經預告變更。
Spare parts may be modified for quality improvement
And such modification may be without advance notice.