

# MATCH

# 1911

型號 AAKACZ260 / AAKACZ261  
系列操作說明書  
MODEL AAKACZ260 OR AAKACZ261  
INSTRUCTION MANUAL



# PISTOL




KWC® KIEN WELL TOY INDUSTRIAL CO., LTD  
www.kwcgun.com

台南市仁德區義林路168巷89號  
NO.89, LN. 168, YILIN RD.,  
RENDE DIST., TAINAN CITY  
71752, TAIWAN (R.O.C.)  
TEL : +886-6-2798175  
FAX : +886-6-2798176  
sales@kwcgun.com  
www.kwcgun.com

## 射擊/SHOOTING

### 射擊前的準備 BEFORE SHOOTING

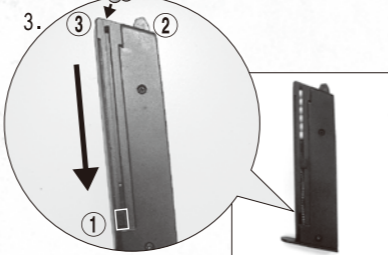

- 將滑粒壓到底端並使其固定住。
  - 壓下子彈卡榫，以便裝填子彈。
  - 將BB彈裝入(最多12發)。
- Pull the magazine follower down and lock it in place by pushing the follower knob over the stopper.
  - Press the bb catch lever down and hold it down to load bb.
  - Load BB into the magazine. Forcing extra BB into the magazine could damage the follower and the airsoft.

### 安全裝置 SAFETY

可射擊  
SAFETY OFF



保險  
SAFETY ON



### 射擊 SHOOTING

- 將保險推到“射擊時”狀態。
  - 將上蓋往後拉到底，聽到“喀嗒”聲響。
  - 確認上蓋是否確實彈回原來的位置。  
(若上蓋未完成回到原來位置而扣引扳機的話，槍身內部活塞將會損壞)
  - 扣引扳機後BB彈被發射出去。
  - 若不再繼續發射時，將保險推到“不射擊時”狀態。
- Switch safety off.
  - Pull the slide back until you hear a "Click" indication the shot is locked and ready.
  - Make sure that the slide has returned backed to its original position before pulling the trigger.(pulling the trigger before the slide is properly seated will cause internal damage to the air soft gun).
  - Pull the trigger to shoot.
  - Repeat step B for next shot.
  - At the end of use, switch the safety on and remove the magazine.



- 子彈用盡時上蓋後定。  
Hold open when BB runs out.



- 按下上蓋止動片以復進上蓋。  
Press slide stop to release slide.

- ▲注意：向目標射擊之前，請勿將手指放在扳機上！  
▲CAUTION: Do not pull the trigger except shooting.

## 故障/BREAK DOWN

### 後準星調整 ADJUST REAR SIGHT



### 故障的原因與排除 BREAK DOWN FAQ

- 卡彈的清除：  
不良B.B彈是造成卡彈的原因，上蓋若未回復至正確位置，可能的原因就是卡彈，請以細棒清除B.B彈。  
BB JAM :  
BAD QUALITY BB IS THE MAIN REASON OF BB JAM. PLEASE USE SOME NARROW STICKER TO CLEAR OUT THE BARREL.



### ⚠ WARNING

請務必嚴格遵守 使用說明指導書  
For your safety, please read this manual carefully before use.

此低動能遊戲用槍是針對喜愛射擊運動的消費者所開發。避免因使用方法不正確或改造所發生的故障或事故，請務必詳讀說明書，正確的操作享受愉快的射擊運動。

- 除了發射時外，不要將手指頭掛在板機上。
- 選擇安全與適當目標
- 在非使用期間，請保持保險關閉且退彈的狀態，就算在非使用狀態，也要如同其已裝彈。
- 如任何的機械產品，槍的保險也可能失效。即使在保險關閉的狀態下也請小心的操作此槍，請勿將槍口對人。
- 千萬不要對堅硬或平坦表面、水面射擊，以避免跳彈。
- 請妥善保管產品在未未成年孩童無法伸手取得的場所。
- 每次使用前後都應該檢查擋彈物，假如擋彈物表面有磨損失效或是反彈時請停止使用。
- 請使用高品質BB彈，請勿使用①口徑大於6mm②表面不平滑的③重複使用過的BB彈④非本說明書指名的發射物。
- 檢查任何掉落之槍枝，以確保未影響其功能。

- 如果連續拉動上蓋，即是連續進彈，所以請每拉動上蓋一次，就做一次的射擊。  
ONE BB WILL BE CHAMBERED BY EACH PULL OF SLIDE. MAKE SURE TO FIRE AFTER EACH PULL OF SLIDE.
- 使用一段時間後，請再次潤滑(噴砂油脂)上蓋滑動處及氣缸與活塞滑動處。  
SPRAY LUBRICANT AS PICTURE AFTER A PERIOD OF USAGE.

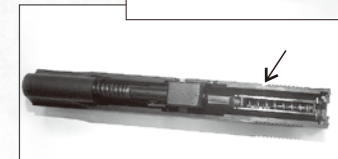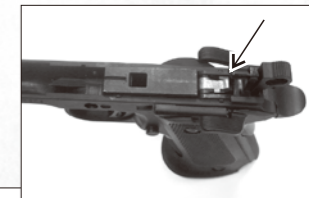


This airsoft is intended for recreational or training purposes. To prevent improper handling, modification or alteration causing malfunction or accident, please read the owner's manual carefully. Enjoy the pleasant shooting experience by proper operation.

- Do not put your finger on the trigger except shooting.
- Please choose safe and proper target.
- Please always keep the airsoft on safe and unloaded when not using.
- Like all mechanical devices, an airsoft safety can fail. Always handle the airsoft safely even when the safety is "on safe". Never point the airsoft at any people.
- Avoid ricochet. Never shoot at a hard or flat surface or at water.
- Keep the airsoft out of reach for small children.
- Your backstop should be inspected for wear before and after each use. Discontinue use of the backstop if surface shows signs of failure or ricochet.
- Only use high quality BB. Never use ①BB diameter larger than 6mm②BB with unsmoothed surface③ reused BB that has been fired④incorrect projectiles not design for this airsoft.
- Check any gun that has been dropped to ensure that its function has not been affected.

# WARNING 警告


★使用低動能遊戲用槍前，請務必戴上保護眼鏡或面罩。  
★Always wear eye protection when using airsoft.

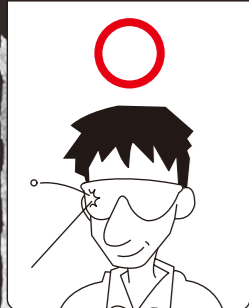

★使用低動能遊戲用槍前，請務必詳讀說明書內容。  
★Read the owner's manual before using the airsoft.




★不可攜帶低動能遊戲用槍在公共場所行走，請務必裝在袋子或盒子內。  
★Always transport an airsoft in a locked carrying case. Make sure it is unloaded and on safe.

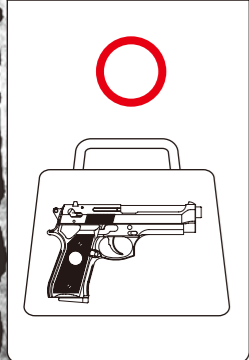


★請不要由槍口向內探視。  
★To Avoid accidental discharge, do not look directly into the barrel.




★請不要在公開場合使用低動能遊戲用槍，也請不要拿低動能遊戲用槍對準人或動物。  
★Never brandish or aiming this airsoft at any people or domestic animals. Brandish this airsoft in public is dangerous and may be a crime.

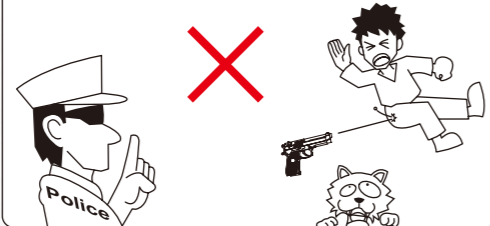

★請確認後再發射BB彈方向，附近無人或動物存在。  
★Always be aware of your surrounding before and during shooting and select a safe area for target practice.

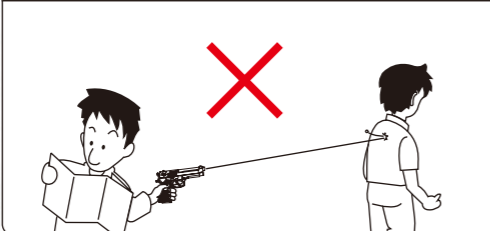

★不可任意改造或加工低動能遊戲用槍，私自改造加工會造成產品損壞、保固失效，導致使用上不安全，甚至觸法送辦。  
★Disassemble, modify, or alter of your airsoft may cause malfunction, void your warranty and may make it unsafe to use.

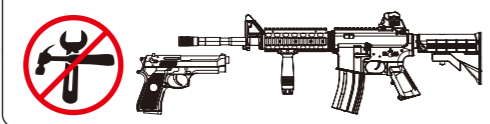


Do not display this pistol in public—it may confuse people and may be a crime. 請不要忘了，雖然自己知道這只是玩具，但不知道的人，會以為這是真槍。

# AAKACZ26 系列 零件表 AAKACZ26 SERIES PARTS LIST

圖號	零件名稱	UNIT	圖號	零件名稱	UNIT
P02	上蓋	SLIDE	B05	後準星螺絲	REAR SIGHT SCREW
P05	活塞	PISTON	B12	槍管(銅)	INNER BARREL
P08	氣缸	CYLINDER	B16	保險桿軸	SAFETY LEVER PIN
P09	槍管接筒(HOP-UP)	BARREL CONNECTOR	B19	導管銅套	BARREL GUIDE SLEEVE
P11	氣缸卡榫	CYLINDER CATCH	B21	回位導桿	RECOIL BAR
P13	接筒卡榫	CONNECTOR CATCH			
P20	本體	FRAME	F02	軸(後準星座)	PIN (REAR SIGHT BASE)
P22	彈匣導片	MAGAZINE SLIDER	F03	軸(擊鐵箱)	PIN (CHASSIS)
P23	槍柄(左)	GRIP (L)	F04	軸A(止動片)	PIN A (SLIDE STOP)
P24	槍柄(右)	GRIP (R)	F08	氣缸罩	PISTON COVER
P28	彈簧支座	SPRING STOCK	F09	軸B(止動片)	PIN B (SLIDE STOP)
P30	氣缸後罩	CYLINDER REAR COVER	F14	平頭軸(氣缸)	PIN (CYLINDER)
			F16	槍柄螺絲	GRIP SCREW
Z01	槍柄配重(左)	GRIP WEIGHT (L)	F18	槍柄後罩軸	REAR GRIP COVER PIN
Z02	槍柄配重(右)	GRIP WEIGHT (R)			
Z06	保險(左)	SAFETY (L)	E03	⊕ M2.0X4 鏤	SCREW M2.0X4
Z07	保險(右)	SAFETY (R)	E09	⊓ M2.3X6 黑	SCREW M2.3X6
Z12	扳機	TRIGGER	E07	KG-01 鋼珠	BEARING
Z13	握柄保險	GRIP SAFETY			
Z18	彈匣定位框	MAGAZINE FIX FRAME	S03	後準星壓簧	REAR SIGHT SPRING
Z20	槍柄飾片(小)	GRIP COVER	S06	止動片壓簧	SLIDE STOP SPRING
Z28	槍柄後罩	REAR GRIP COVER	S09	保險壓簧	SAFETY SPRING
Z41	上蓋止動片	SLIDE STOPPER	S11	扳機壓簧	TRIGGER SPRING
Z42	前準星	FRONT SIGHT	S15	活塞壓簧	PISTON SPRING
Z43	後準星	REAR SIGHT	S16	導管壓簧	OUTER BARREL SPRING
Z44	後準星座	REAR SIGHT BASE			
Z46	槍管導管(短)	BARREL GUIDE	U1	內槍管組件	INNER BARREL UNIT
Z48	上蓋前罩	SLIDE FRONT BUSHING	U2	彈匣組件	MAGAZINE UNIT
Z49	壓簧固定套	FIX ROD	X1	擊鐵箱組件	HAMMER CASE UNIT
			X2	彈匣卡榫組件	MAGAZINE CATCH UNIT
R01	活塞迫緊	PISTON PACKING			
R02	子彈迫緊HOP-UP	RUBBER CHAMBER			
R09	O形環 P-3	O-RING P-3			

# AAKACZ26 系列 零件分解圖 AAKACZ26 SERIES EXPLODED VIEW

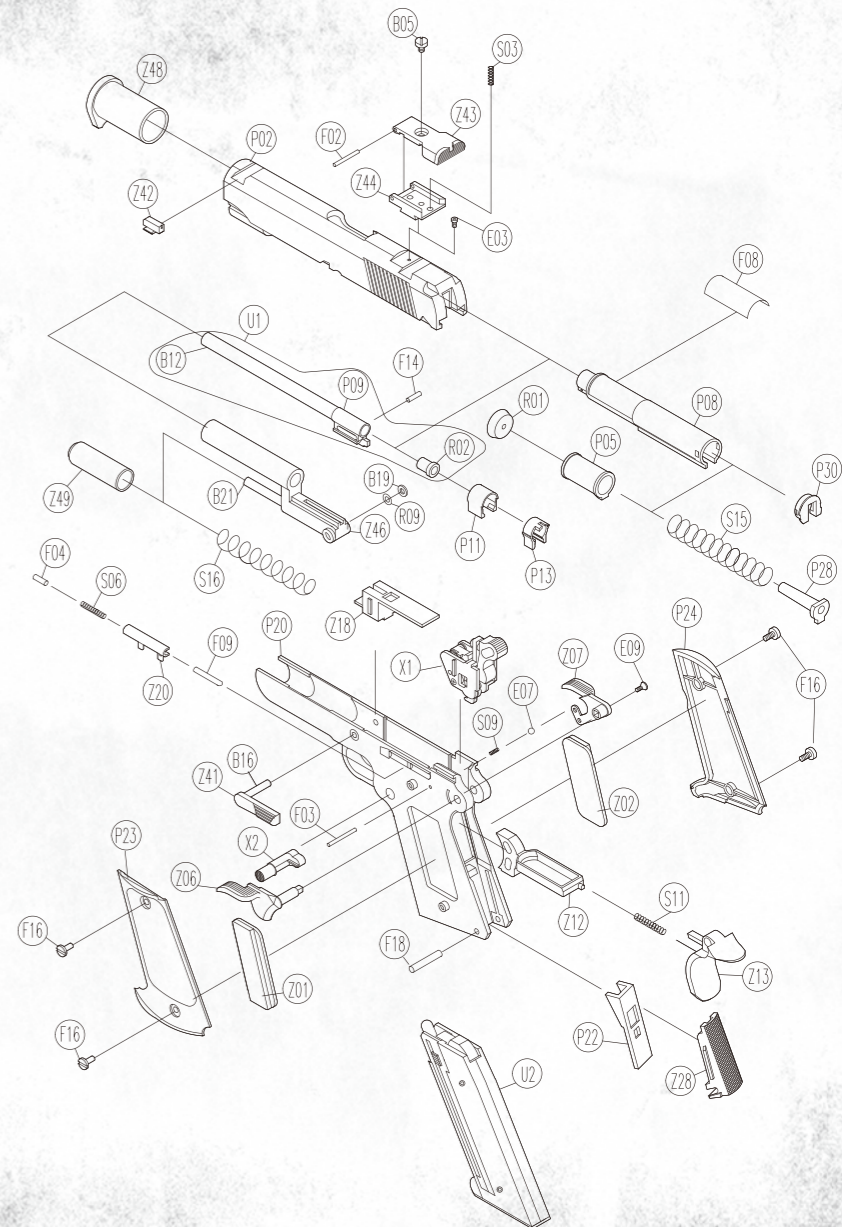

※零件有時為了改良而不經預告變更。  
Spare parts may be modified for quality improvement  
And such modification may be without advance notice.