

P★M



NON-BLOWBACK ★ 6 mm (0.26)
PLASTIC BBs
AIR SOFT

CO2 Cartridge is not included
12g
MADE IN TAIWAN

AAKCCD44系列說明書 AAKCCD44 INSTRUCTION MANUAL

KWC® KIEN WELL TOY INDUSTRIAL CO., LTD
www.kwcgun.com

台南市仁德區義林路168巷89號
No.89, Ln. 168, Yilin Rd.,
Rende Dist., Tainan City
71752, Taiwan (R.O.C.)
TEL:+886-6-279-8175
TEL:+886-6-279-8176
sales@kwcgun.com
www.kwcgun.com




操作/OPERATION

射擊前的準備 BEFORE SHOOTING



- 取出彈匣
RELEASE THE MAGAZINE
 - 推開卡榫
PUSH THE BUTTON
3. 使用六角板手反時針方向取出彈匣底內件。
Use hexagonal wrench to remove the magazine cap by counter clockwise.

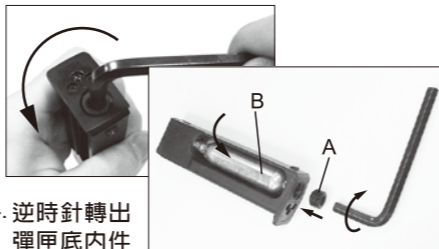

4. 逆時針轉出彈匣底內件後，置入小鋼瓶B，再以順時針方向鎖緊彈匣底內件A。當刺破鋼瓶出氣時，請快速鎖緊。
Turn the magazine cap out counter-clockwise and place CO2 cartridge B inside the magazine. Rapidly turn the screw A clockwise when piercing the cartridge in the magazine.

5. 拉下滑粒。
Pull the magazine follower down.



6. 填裝B.B彈。
Loading BBs
為了使擊發順暢，填裝方法是讓B.B彈在彈匣中一粒接著一粒。
For smooth shooting, Load BBs one by one.

7. 最多可裝13粒。
Maximum BB capacity is 13 rounds.

故障/BREAK DOWN

射擊 SHOOTING

1. 將裝好B.B彈的彈匣插入槍身往上推入，直到彈匣卡榫發出“卡嗒”為止。
Insert fully loaded magazine in the airsoft until you hear the sound of “CLICK”.



2. 瞄準目標物扣引扳機，即可擊發。
Aim the target and pull the trigger.



- ※注意：在長期不使用的狀態下，請將彈匣內氣體洩放掉。

- CAUTION: Release all of the gas in the magazine when it is unused in long-term period.

安全裝置 SAFETY

可射擊
SAFETY OFF



保險
SAFETY ON



故障的原因與排除 BREAK DOWN FAQ

1. 不良的B.B彈是造成卡彈的原因，請使用品質優良的KWC B.B彈。
Bad quality BB is the main reason to cause BB jam. Please use the best quality KWC BB to avoid jamming problem.

2. 當卡彈時，請儘可能先取出彈匣，再以不傷槍管的軟質細棒(不可大於6mm直徑)從槍口置入清除。
When BB jammed, first please release the magazine from pistol then use a soft stick (diameter no bigger than 6mm) to clear up the barrel.

3. 空擊發易造成零件損耗，請避免此動作。
Please avoid dry firing, for it could cause parts deformed or damage.

4. 當扣引扳機時，此時B.B彈即同時在上膛階段，不可扣引一半時又回復，因為如此的動作，將有可能上膛兩發B.B彈。

Pulling trigger will load BB in the barrel. Therefore, please do not pull the trigger half way and release the trigger. This action could load 2 BBs in the pistol and cause jamming.

5. 使用一段時間後，請再次用中性油油脂潤滑撞針及扳機軸心。
Please spray the lubricant into firing pin and trigger pin.



⚠ WARNING

請務必嚴格遵守 使用說明指導書
For your safety, please read this manual carefully before use.

此低動能遊戲用槍是針對喜愛射擊運動的消費者所開發。避免因使用方法不正確或改造所發生的故障或事故，請務必詳讀說明書，正確的操作享受愉快的射擊運動。

- 除了發射時外，不要將手指頭掛在板機上。
- 選擇安全與適當標靶
- 在非使用期間，請保持保險關閉且退彈的狀態，就算在非使用狀態，也要如同其已裝彈。
- 如任何的機械產品，槍的保險也可能失效。即使在保險關閉的狀態下也請小心的操作此槍，請勿將槍口對人。
- 千萬不要對堅硬或平坦表面、水面射擊，以避免跳彈。
- 請妥善保管產品在未成孩童無法伸手取得的場所。
- 每次使用前後都應該檢查擋彈物，假如擋彈物表面有磨損失效或是反彈時請停止使用。
- 請使用高品質BB彈，請勿使用①口徑大於6mm②表面不平滑的③重複使用過的BB彈④非本說明書指名的發射物。
- 最高的使用及儲藏CO2小鋼瓶環境為50°C(122°F)以內，高溫可能會造成CO2小鋼瓶過熱甚至爆炸。
- 檢查任何掉落之槍枝，以確保未影響其功能。

This airsoft is intended for recreational or training purposes. To prevent improper handling, modification or alteration causing malfunction or accident, please read the owner's manual carefully. Enjoy the pleasant shooting experience by proper operation.


- Do not put your finger on the trigger except shooting.
- Please choose safe and proper target.
- Please always keep the airsoft on safe and unloaded when not using.
- Like all mechanical devices, an airsoft safety can fail. Always handle the airsoft safely even when the safety is "on safe". Never point the airsoft at any people.
- Avoid ricochet. Never shoot at a hard or flat surface or at water.
- Keep the airsoft out of reach for small children.
- Your backstop should be inspected for wear before and after each use. Discontinue use of the backstop if surface shows signs of failure or ricochet.
- Only use high quality BB. Never use ①BB diameter larger than 6mm②BB with unsmoothed surface③reused BB that has been fired④incorrect projectiles not design for this airsoft.
- Do not expose CO2 cartridges to heat or store them at temperatures above 50°C(122°F). CO2 cartridges may over heat or explode at temperatures above 50°C(122°F).
- Check any gun that has been dropped to ensure that its function has not been affected.

⚠ WARNING 警告


AAKCCD44 系列 零件表 AAKCCD44 SERIES PARTS LIST

AAKCCD44 系列 零件分解圖 AAKCCD44 SERIES EXPLODED VIEW

★ 使用低動能遊戲用槍前，請務必戴上保護眼鏡或面罩。
★ Always wear eye protection when using airsoft.

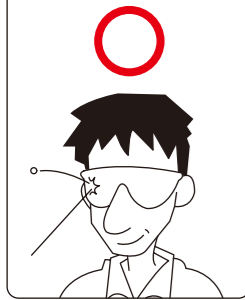

★ 不可攜帶低動能遊戲用槍在公共場所行走，請務必裝在袋子或盒子內。
★ Always transport an airsoft in a locked carrying case. Make sure it is unloaded and on safe.

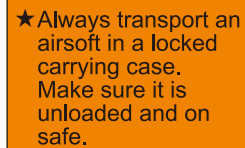


★ 使用低動能遊戲用槍前，請務必詳讀說明書內容。
★ Read the owner's manual before using the airsoft.




★ 請不要由槍口向內探視。
★ To Avoid accidental discharge, do not look directly into the barrel.




★ 請不要在公開場合使用低動能遊戲用槍，也請不要拿低動能遊戲用槍對準人或動物。
★ Never brandish or aiming this airsoft at any people or domestic animals. Brandish this airsoft in public is dangerous and may be a crime.

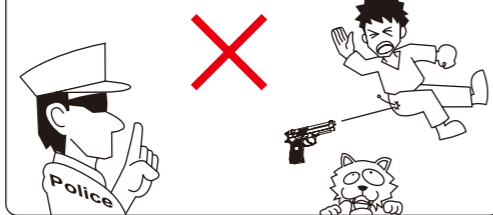

★ 請確認後再發射BB彈方向，附近無人或動物存在。
★ Always be aware of your surrounding before and during shooting and select a safe area for target practice.

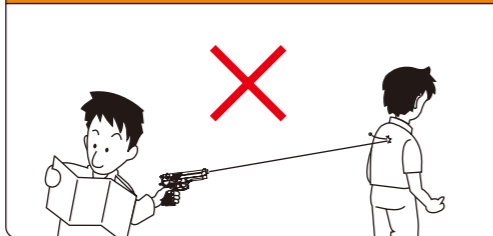


 ★ 不可任意改造或加工低動能遊戲用槍，私自改造加工會造成產品損壞、保固失效，導致使用上不安全，甚至觸法送辦。
★ Disassemble, modify, or alter of your airsoft may cause malfunction, void your warranty and may make it unsafe to use.



圖號	零件名稱	UNIT
P09	保險配件	SAFETY JOINT
P22	彈匣滑粒	MAGAZINE FOLLOWER
P23	槍柄	GRIP
P24	前槍管套(大孔)	FRONT BARREL CAP
K26	彈匣底座配件	MAGAZINE BASE JOINT
Z01	本體(左)	FRAME (L)
Z02	本體(右)	FRAME (R)
Z03	扳機	TRIGGER
Z04	保險(左)	SAFETY (L)
Z05	撞針	FIRING PIN
Z06	槍管連動件	BARREL CONNECTOR
Z07	扳機連動件	TRIGGER CONNECTOR
Z08	彈匣	MAGAZINE
Z10	保險固定件	SAFETY LOCK
Z11	彈匣卡榫	MAGAZINE CATCH
Z21	擊鐵	HAMMER
B01	槍管	INNER BARREL
B03	撞針軸	FIRING PIN AXIS
B04	扳機軸	TRIGGER AXIS
B05	扳機連動件軸	TRIGGER CONNECTOR AXIS
B465	心棒	VALVE
UKG01-B19	心棒蓋	VALVE CAP
KCB75-B16	氣瓶頂針	PUNCTURE VALVE
KG12-B215	氣瓶頂針迫緊	PUNCTURE VALVE PACKING
UKG01-P31	心棒蓋迫緊	VALVE CAP PACKING
F01	扳機連桿	TRIGGER BAR
KC44-F02	擊槌軸	HAMMER AXIS
KG47-F401	心棒壓簧墊圈	VALVE SPRING GASKET

圖號	零件名稱	UNIT
S01	槍柄扣環	GRIP RING
S02	槍管回位壓簧	BARREL SPRING
S03	保險左壓簧	SAFETY SPRING
S05	撞針扭簧	FIRING PIN SPRING
S07	扳機連桿扭簧	TRIGGER BAR SPRING
S08	彈匣卡榫壓簧	MAGAZINE CATCH SPRING
S09	擊槌扭簧	HAMMER SPRING
S10	緩衝扭簧	PUMPER SPRING
KG47-S401	彈匣壓簧	MAGAZINE SPRING
KG47-S404	心棒壓簧	VALVE SPRING
EA064	⊕ Ⅲ 2.3X6束黑熱	SCREW 2.3X6
EA066	⊕ Ⅲ 2.3X8束黑熱	SCREW 2.3X8
EA061	⊕ Ⅲ 2.3X5束黑熱	SCREW 2.3X5
EA087	內六角M5-P0.8X8黑	HAX SOCKET SCREW
EA004	六角螺帽M5-0.8	HAX NUT
EA020	⊕ 2.3X6尖.鉸.熱	SCREW 2.3X6
ED008	E型扣環	E-RING
KCB76-E08	內六角止付螺絲	SET SCREW
B003	鋼珠	STEEL BALL
UKG01-R01	子彈迫緊	RUBBER CHAMBER
KC47-R01	子彈迫緊HOP-UP	RUBBER CHAMBER
G005	O型環 1X4	O-RING 1X4
G001	O形環 φ 0.8x φ 11.3id	O-RING φ 0.8x φ 11.3id
G013	O型環 1.45X6.9id	O-RING 1.45X6.9id
G009	O型環 1X7	O-RING 1X7
G022	O形環 S-8	O-RING S-8
U1	內槍管組件	INNER BARREL UNIT
U2	扳機組件	TRIGGER BASE UNIT
U3	氣瓶頂針組件	PUNCTURE VALVE UNIT

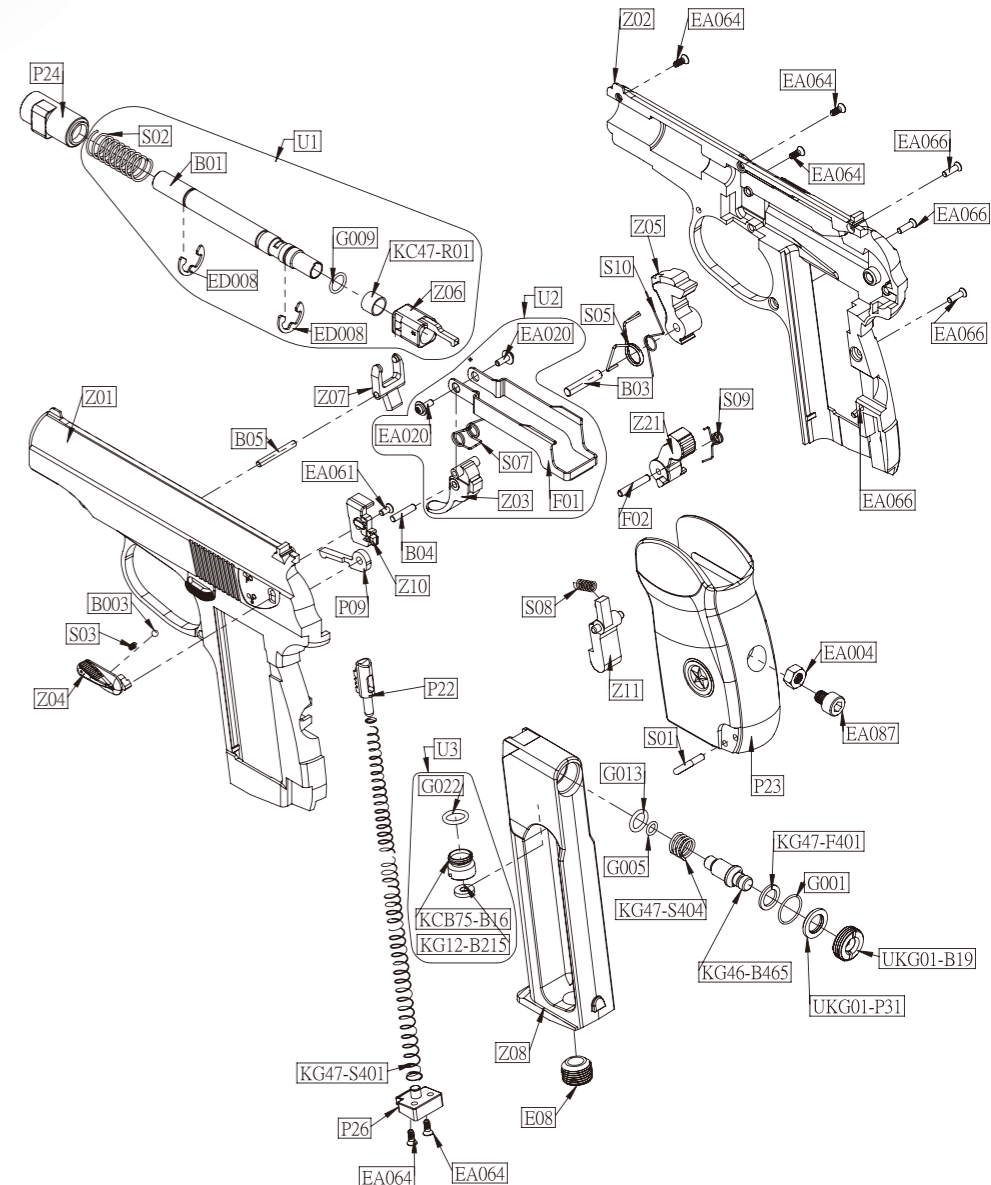

※零件有時為了改良而不經預告變更。
Spare parts may be modified for quality improvement
And such modification may be without advance notice.

Do not display this pistol in public—it may confuse people and may be a crime.
請不要忘了，雖然自己知道這只是玩具，但不知道的人，會以為這是真槍。