


 **VICTOPTICS**[®]



RFSL01

USER MAUNAL FOR
VICTOPTICS 6x21 RANGE FINDER



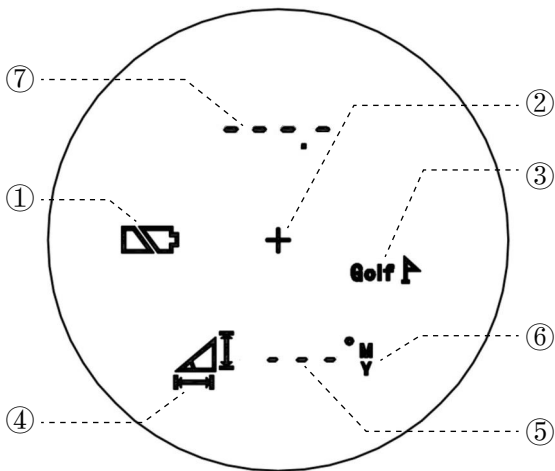

① Battery Indicator

② Aiming Reticle

③ Golf Mode

④ Incline Angle, Horizontal Distance , Vertical Distance Mode Sign

⑤ True Angle, Horizontal and Vertical Distance Value

⑥ Unit: M--Meter, Y--Yard

⑦ LOS Distance Value

Power On


Short press the Power Button to turn on the unit.

The unit will shut down automatically if no operation after 10 seconds.

The default display at first use will be shown like the pic at right side, in the future it will display last setting.



Power Button

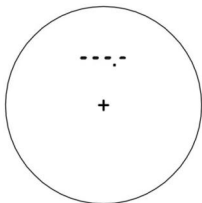

Menu Option

Press the menu button for 2 seconds, to enter menu mode.

During setting, press the mode button for 2 seconds to quit and back to ranging standby status.




Mode Button

Measuring Method Selection

At setting mode, press power button to choose the blinking mode Auto or Golf mode)


Press mode button to confirm the choice and move forward to the menu option.

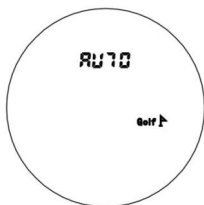

Auto Mode

Ranging multiple targets, long press power button to scan the targets.


- Display ranging distance following the aiming target

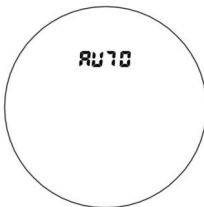

Golf Mode

Ranging multiple targets, long press power button to scan the targets.


- Display the nearest target distance.

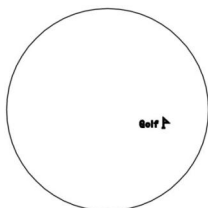

Ranging Mode Option

Press the power button to choose "Ang", "Verticle", "Horizontal" or "OFF" when it is blinking


Press the mode button to confirm the choice and move forward to the next menu option

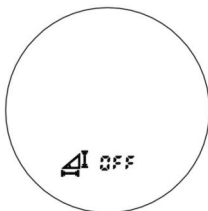

Off Mode

Short press the Power Button to measure the target


- Only LOS distance displayed

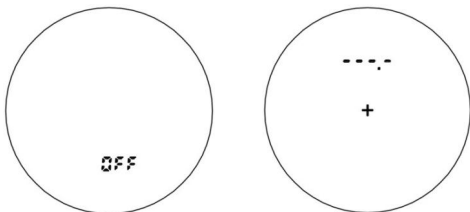

Angel Mode "∠"

Short press the Power Button to measure the target


- Display LOS distance at the top of the screen and horizontal distance at the bottom of the screen

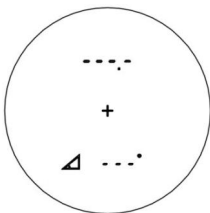

Vertical Mode "V"

Short press the Power Button to measure the target


- Display LOS distance at the top of the screen and vertical distance at the bottom of the screen

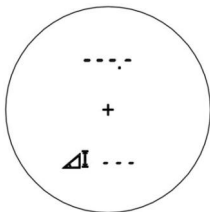

Horizontal Mode "H"

Short press the Power Button to measure the target


- Display LOS distance at the top of the screen and horizontal distance at the bottom of the screen

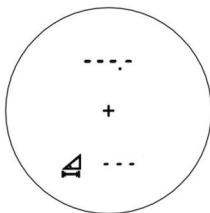

Distance Unit Option

At the menu mode, M or Y will be blinking, press the Power button to choose Y (Yards) or M (meters)


Press Mode button to confirm the choice and move forward to the menu option

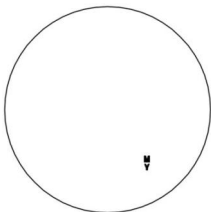

Ranging

Aiming the target, short press power button to range distance.


- Target distance displayed.
- Long press the power button to scan mode.

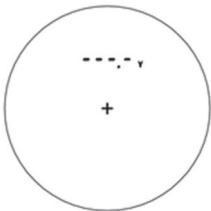

Low Battery Warning

When the battery voltage lower than 2.4V, the low battery warning button will be blinking.

When battery lower than 2.3V, could not range anymore, empty low battery warning icon blinking, turned off after 3 seconds.

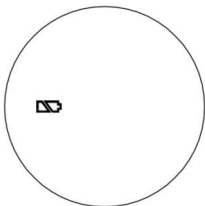

For More details please visit our website:

www.victoptics.com/



VICTOPTICS ONE YAER WARRANTY

Your VictOptics product is warranted free of defects in materials and workmanship or a period of 1 year from the time of purchase by the original owner. In the event of a defect under this warranty, we will, at our option, repair or replace the product t no charge to you. If we can't repair your product, we will replace it with a product of equal or better physical condition.

This warranty does not cover damages caused by misuse, improper handling, theft, deliberate damage, or cosmetic damage. The battery is not covered under this warranty. Also, this warranty is null and void if modification or mainte provided by someone other than VictOptics. This warranty is non-transferable.

For products not directly purchased from us, please contact the local dealer for applicable warranty info.

Any warranty must be registered and complete warranty terms by the link:

WARRANTY.VECTOROPTICS.COM





WWW.VICTOPTICS.COM