


USERS RESTRICTED TO  
18 YEARS OF AGE OR OLDER

**AUTO ELECTRIC GUN**


**INSTRUCTION MANUAL**

**THE NAME OF THE PARTS**

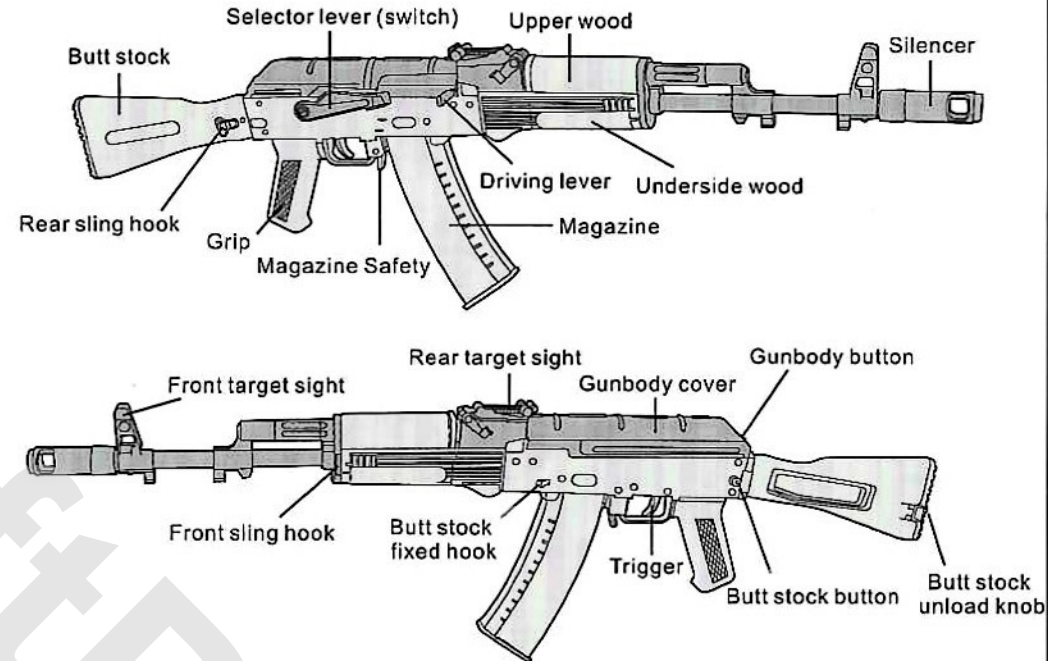


**1 SELECTOR LEVER AND SAFETY SETTING**

**CAUTION** Set the selector lever correctly in position, otherwise, malfunction may occur.

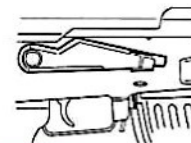


**WARNING**  
To prevent malfunction of the switch do not change the selector lever from semi to full auto while pulling the trigger.


**1** Safety setting (the trigger cannot be pulled.)  
When you are not firing the gun or during storage always set the selector to the safe position.

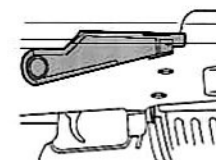

**2** Fully automatic (automatic firing)  
The gun will fire automatically while the trigger remains pulled.

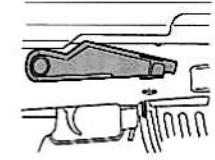

**3** Semi automatic  
The gun will fire one shot each time the trigger is pulled.

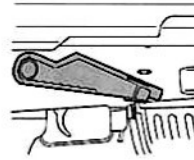

**D74**




**D47**




**D12**

**AUTO ELECTRIC GUN**

## 2 SETTING THE BATTERY (SET THE BATTERY AFTER CHARGING)

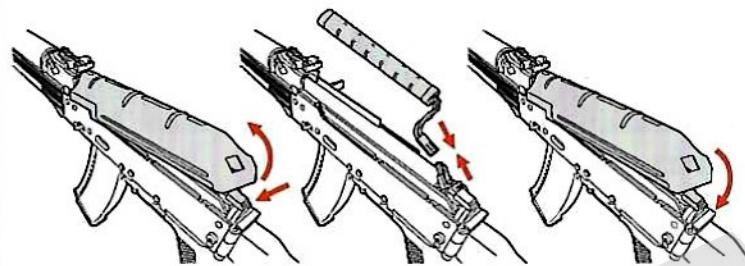


- 1 Press the gun body cover key, dismantle a gun body cover.
- 2 Setting the 8.4V refreshes battery.
- 3 Cover a gun body cover.

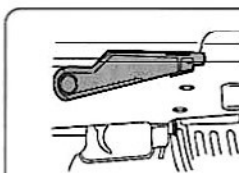

**WARNING**

The in bar of occurrence trouble, while installing battery, establishes choice control column in the safe position

## 3 SETTING THE MAGAZINE

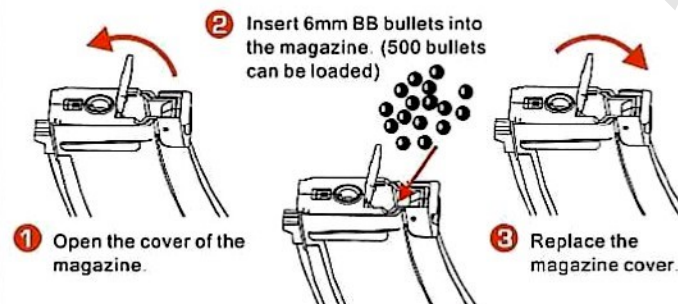


- 1 Open the cover of the magazine.
- 2 Insert 6mm BB bullets into the magazine. (500 bullets can be loaded)
- 3 Replace the magazine cover.


Magazine stopper relief rib

Slide the rib in the arrow direction to remove remaining BB bullets (Be careful since BB bullets may jump out.)

- 5 Set the magazine up ward. Install the magazine as illustration.


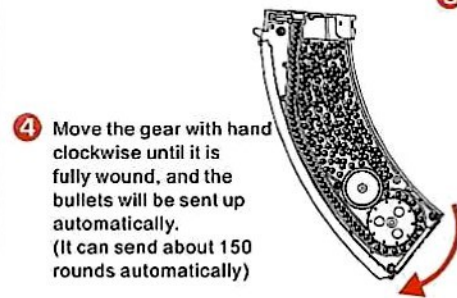


- 4 Move the gear with hand clockwise until it is fully wound, and the bullets will be sent up automatically. (It can send about 150 rounds automatically)

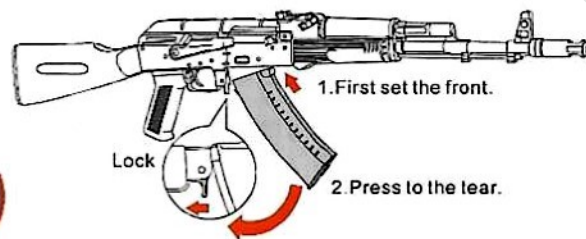

3. Press the release lever towards the trigger to lock.


## 4 REAR SIGHT ADJUSTMENTS

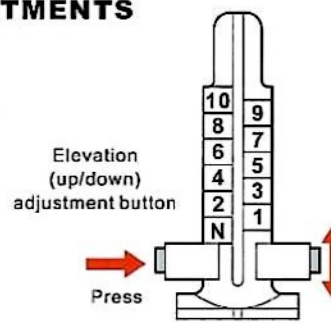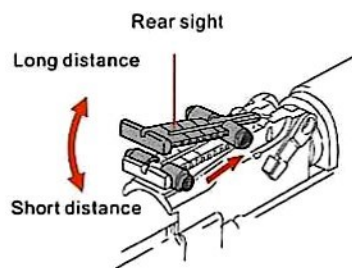

The rear sight is a tangent type which is adjusted vertically according to distance to the target.

Press the adjust button and slide it forward or backward to move the sight up or down. The larger the number, the longer the distance to the target.

## 5 STOCK OPERATE

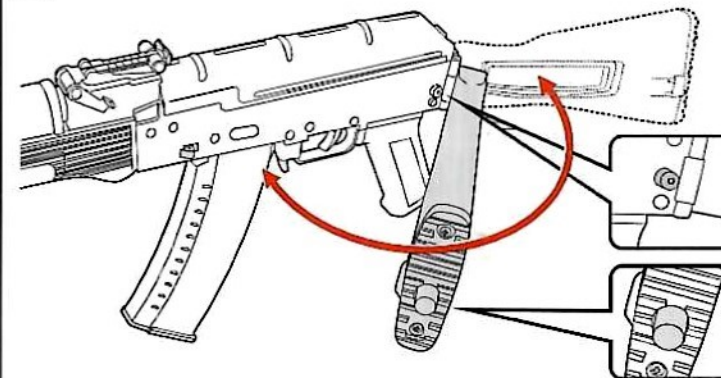


Press a butt end key, fold to a butt end the butt end fixedly hook to hang up toward the on the side.


Press a butt end to unload knob, then turn back a butt end home position.

## 6 SHOOTING

- 1 Pull the cocking handle until a click sound is heard.

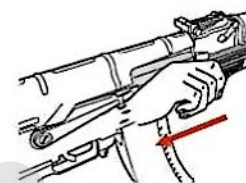

- 2 Aim at the target and press the trigger.

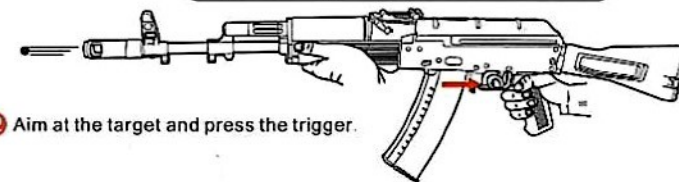


Set the selector lever to Semi or Full Auto.

## 7 VARIABLE HOP UP SYSTEM

Adjustment procedure (Adjust by carry out trial firing)

Gradually turn the adjustment dia towards Hop to give hop up to bullets. (The best setting is where bullets fly horizontally.)

Turning excessively adversely affects the trajectory, so stop turning the hop adjustment lever when bullets fly horizontally.

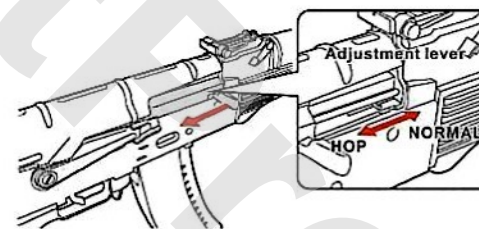

The best position is where the bullets fly horizontally, and the longest flying distance is obtained.

Too much hop-up (return the lever towards NORMAL)

Best position

Not enough hop-up (return the lever towards NORMAL)

Construction Diagram

