NOVESKE

6mm Gas Blowback Rifle

AGE: ABOVE 18

INSTRUCTION MANUAL

WARNING:

⚠	DANGEROUS: NOT A TOY. Adult supervision required. Misuse or careless use may cause serious injury.
	FOR AGES 18 YEARS AND UP - Must be 18 years of age to purchase; minors require parent or legal guardian supervision to operate.
	EYE PROTECTION REQUIRED - Always wear eye and body protection to prevent injury. Do not fire at hard surface to prevent ricochet.
	READ INSTRUCTION BEFORE OPERATING - Follow safe handling procedures at all times. The purchaser and user should conform to all laws governing the use and ownership of airguns.
⚠	DO NOT BRANDISH OR DISPLAY THIS PRODUCT IN PUBLIC - It may confuse people and may be a crime. Police and others may think it is a firearm. Do not change the coloration and markings to make it look more like a firearm. That is dangerous and may be a crime.

⚠ WARNING

Always read this manual before using

- **Read through manual before shooting,paying special attention for safe operation.**
- **Thoroughly understand the warnings and cautions for safe operation.**
- **Always follow warnings and cautions strictly.**
- **Failing to do so may cause injury, accidents, or damage to the gun.**

Always use precision BB Bullets for this air gun. Never use any used BBs.

Do not look directly into the gun barrel to avoid accidental discharge of BB.

Never aim or shoot a person or animal as the target. Always set the selector on safety position except when you are ready to shoot a target.

Never hold the gun sideways as the BB bullets will curve right or left. This is due to the HOP-UP system.

Do not brandish in public, do not alter the color ation and markings, such an action is dangerous and may be a crime.

Select a safe place for operating the air gun, avoiding places where people and cars pass cross or third persons are around.

Always remove the battery and store the air gun in a case or bag and at a place out of reach by children so that they will not be injured during mischevous play.

Disassembling or modifying the gun may generate danger or adversely affect the performance, so avoid disassembling or modifying the air gun.

There are cases that bullets remain in the gun after the magazine is disconnected, pulling the trigger carelessly is extremely dangerous. After towards a safe direction and fire to confirm that no bullets remain in the gun.

1 Components

- Left Side

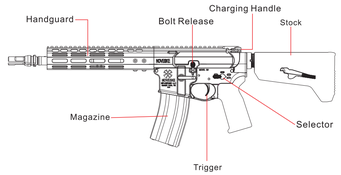

- Right Side

2 Selector

- SAFE

Always set the selector lever to SAFE unless you are ready to shoot.



- SEMI

Shoot one bb when pull the trigger once.



- AUTO

Shoot continuously when the trigger remains pulled.

CAUTION

Do not switch the selector lever while the trigger is pulled, which may cause malfunction of the replica.

Do not pull the trigger when the selector is on SAFE position, which may cause damage of the safety unit and trigger.

3 Filling Gas And Loading Magazine

Press the mag release to remove the magazine.

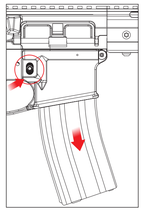

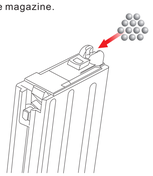

Note: Only use the 6mm BBs
Fill the magazine with the quick loader
Magazine capacity: 36 rds

Press the gas nozzle into the valve of the magazine.
Make sure the nozzle always in vertical position.

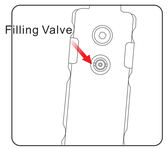

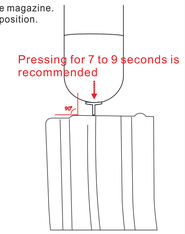

4 Insert The Mag

Push the mag upward into the magwell til a click sound is heard.

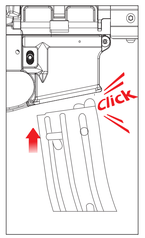

Caution

- Please use high quality 0.20g or heavier 6mm BBs.
- Inferior or used BBs may cause damage to the product, which is not cover by warranty.

For best performance, do not shoot immediately after gas filling is complete.

Caution

- Keep the magazine away from exposure to sunlight and fire, which may cause an explosion.
- It's strongly recommended to empty the gas of the magazine after shooting is done, make sure to avoid directly gas contact with the eyes or skin when the gas is being released.

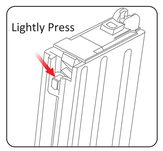

Press the gas releasing button to release the residual gas

5 Adjust The Stock

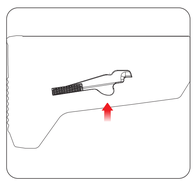

Press the Stock Adjusting lever to adjust the stock position.

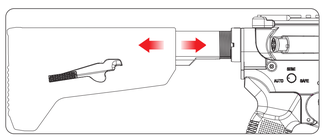

Caution

- Watch out your fingers when adjust the stock.

6 Charging Handle

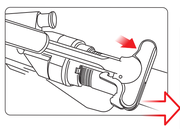

Pull the charging handle backward then check the chamber.
Make sure it is clear.



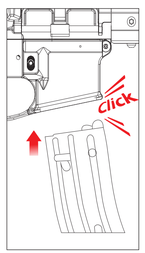

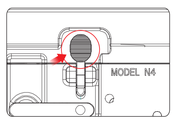

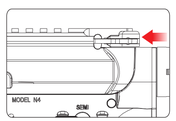

Press the bolt release button to release the bolt to the chamber.

Caution:
The bolt release function only works when the magazine is inserted.

1. Set the selector to semi or auto.
2. Pull the trigger and shoot.

Caution:
Do not put your finger on the trigger till you are ready to shoot.

7 Variable Hop-up sysytem

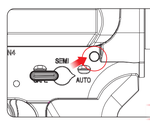

Press the pin on the receiver

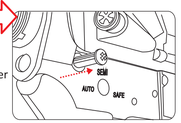

Pull out the pin to separated upper and lower receiver.

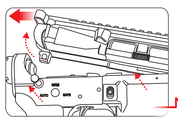

Pull the charging handle backward to reveal the Hop-up unit.

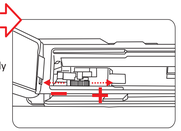

The best position is where the BBs fly horizontally and the longest flying distance is obtained.

Caution:

- Never hold the gun sideways as the BBs will curve right or left dure to the hop-up system.

8 Maintenance

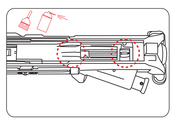

- Upper receiver

Lightly lubricate all moving parts inside the upper receiver

- Lower receiver

Lightly lubricate all moving parts inside the lower receiver

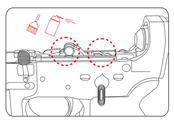

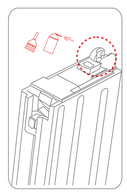

- Magazine

Clean all the areas and out of fouling metal debris and dirt.

- Maintenance when bullet speed becomes low
- Apply oil as shown below, using the cleaning rod and oiled cotton cloth. insert cleaning rod into the barrel.
- To complete the cleaning, use the cleaning rod (with cotton) as shown below to remove excess oil.





Warning

- Always carry out maintenance AFTER returning the hop up knob to the default position. (Hop-OFF)



Hold at the leading end of the rod and insert the rod into the barrel while turning the rod.



Length : Approx 25 to 30mm
Width :Approx.10mm

Wind the cut cotton cloth.



Inserting the rod will be difficult if you hold rop at the end.

- Routine Maintenance
- Keep the rifle in clean condition.
- Never used dirty, damaged or distorted bullets.
- Regularly clean the barrel with soft cleaning rod.

www.deairsoft.com @deairsoft @de_airsoft